

HTM-1990R

MULTI-FORMAT
COLOR MONITOR

OPERATION MANUAL





CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).

NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead inside a triangle is intended to warn the user that parts inside the product are dangerous and many cause electric hazards.



The exclamation mark inside a triangle is intended to inform users that important operating and servicing instructions are provided with the equipment.

WARNING: FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL
COMPONENTS ONLY WITH MANUFACTURE'S RECOMMENDED
PARTS (REFER TO SERVICE LITERATURE).

DECLARATION of CONFORMITY:

The "CE" mark means the products as mentioned below will meet the intent of the following Directives and Standards.

Inrush current according to EN55103-1 Annex B is 47.5A.

Directives: 93/68/EEC, 89/336/EEC, 92/31/EEC for EMC (electromagnetic compatibility)

73/23/EEC for Low voltage (Safety)

Standards: EN55103-1-E4, EN55103-2-E4, EN60950-1

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR WATER.

Instructions for Disposal of Electric and Electronic Equipment in Private Household



Disposal of used Electric and Electronic Equipment

(Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product, or in the related documents in the package, indicates that this product shall not be treated as normal household waste. Instead, it should be taken to a proper applicable collection point or depot for the recycling of electric and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent possible negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources.

For more detailed information about recycling of this product, please contact your local city authority, your household waste disposal service or the place where you purchased the product.

NOTE:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION;

ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PART RESPONSIBLE FOR COMPLIANCE COULD VOID THE USERS AUTHORITY TO OPERATE THE EQUIPMENT.

IMPORTANT SAFETY INSTRUCTION

1. General

- 1) Read all instructions provided.
- 2) Save these instructions for future use.
- 3) Follow all warnings and instructions marked on the television equipment.
- 4) Never insert objects of any kind into this television monitor through cabinet slots as they may come in contact with dangerous voltage points or short out parts, resulting in fire or electric hazards, Never spill liquid of any kind on the television monitor.
- 5) Do not attempt to service this television monitor yourself as operating or removing covers many expose you to dangerous voltage or other hazards, Refer all servicing to qualified service personnel.
- 6) Do not use attachments not recommended by the television equipment manufacturer as they may result in the risk of fire, electric shock, or injury to persons.
- 7) This television monitor has been preadjusted to meet the respective broadcasting standard signals. So, it cannot be used with the signals of different broadcasting standards.
- When keeping or transporting the unit for a long time, pack it in the supplied carton or equivalent.

2. Power supply

- This television equipment should be operated only from the type of power source indicated on the marking label.
- 2) This television equipment is provided with a three-wire grounding type plug with a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet.
 Do not defeat the safety purpose of the grounding-type plug.

- 3) When connecting and disconnecting the power cable, be sure to hold the plug.
- 4) Do not allow anything to rest on the power cord. Do not place this television equipment where the cord will be abused by persons walking on it.
- 5) For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the equipment due to lightning and power-line surges.
- Do not overload wall outlets and extension cords as this can result in fire or electric shock.

3. Usage and location

- Do not use this television equipment near water - for example, near a bath tub, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, or the like.
- 2) Do not place this television equipment on an unstable cart, stand, or table. The television equipment may fall, causing serious injury to children and adults, and serious damage to the equipment. Use only with a cart or stand recommended by the manufacture, or sold with the television equipment. Wall or shelf mounting should follow the manufacture's instructions, and should use a mounting kit approved by the manufacture.

Television equipment and cart combination

should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

IMPORTANT SAFETY INSTRUCTION

- 3) Slots and openings in the cabinet and the back or bottom are provided for vitiation, and to ensure reliable operation of the monitor and to protect it from overheating, these openings should never be blocked or covered. The openings should never be blocked by placing the television equipment on a bed, sofa, rug, or other similar surface. (This television equipment should never be placed near or over a radiator or heat register.)

 This television equipment monitor should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.
- 4) Avoid operating or placing (keeping) in a hot (+40°C or over) or cold (less than 0°C), high vibration, or dusty place. Avoid operating or placing (keeping) in a place exposed to direct sunlight, otherwise the CRT surface may deteriorate.
- 5) If an image of extremely high brightness is displayed on the screen for a long time, the CRT may get burned in.

4. Cleaning

- Unplug this television equipment from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use thinner or benzine for cleaning.
 Otherwise, the cabinet may deform or the paint may peel away.

5. Repair

- Unplug this television monitor from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power cord or plug is damaged or fraved.
 - b. If liquid has been spilled into the television.
 - c. If the television monitor has been exposed to rain or water.
 - d. If the television does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the television monitor to normal operation.
 - e. If the television monitor has been dropped or the cabinet has been damaged.
 - f. When the monitor exhibits a distinct change in performance - this indicates a need for service.
- 2) When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacture that have the same characteristics as the original part. Unauthorized substitutions may result in fire. Electric shock, or injury to persons.
- 3) Upon completion of any service or repairs to this monitor, ask the service technician to perform routine safety checks to determine that the television is in safe operating condition.
- For repair service, contact Ikegami's authorized sales representative or Ikegami service desk directly.

PRECAUTIONS FOR OPERATIONS

- Never let this unit fall or subject it to strong shock.
- 2) Do not remove the cabinet unless necessary. High-voltage parts are contained in the cabinet and they are very dangerous if you touch then. Only qualified service engineers are allowed to adjust the internal parts of the cabinet.
- This color monitor has been adjusted to signals conforming to each broadcasting standard.
 It cannot be used for signals of different broadcasting standards.
 - Be sure to operate the color monitor within the voltage range marked on its back.
- If cabinet or screen is dirty, wipe with soft cloth. At this time, avoid using benzine or thinner.
 Otherwise, the paint may peel away.
- 5) Note that, if video signals with high luminance are monitored on the CRT over a long period of time, the CRT may burn in the image.

- 6) Avoid using or storing this unit in the following places:
 - Hot (+40°C or more) or cold (0°C or less) places.
 - Especially where this unit may be exposed to the direct rays of the sun; the cabinet may deform and the fluorescent screen of the CRT may deteriorate.
 - · Humid and dusty places.
 - Places where there is considerable vibration.
 - · Places exposed to rain or water.
 - When storing or transporting this unit, pack it in the supplied carton or equivalent.
- 7) If no image can be monitored even after performing user adjustment or the unit appears faulty, do not dismantle this unit by yourself. In such cases, contact the **lkegami** service desk.
- 8) Should this unit fail within one year after delivery, it will be repaired free of charge unless the malfunction was caused by mishandling or misuse of the user. However, the fuses are not covered by the warranty.
- 9) The specifications and appearance of this unit may be subject to change for further improvement without prior notice.

Precautions Upon Use

To ensure safe use of this monitor, read this manual carefully, paying particular attention to the following items.

1. Do not use any power supply other than the regulation AC power.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

2. Do not subjecting the monitor to strong impact.

Otherwise, it will result not only in malfunction, but explosion of the CRT as well.

3. Avoid use and storage in the following places.

* Locations which do not meet the designated ambient temperature

installing the monitor near equipment generating heat or in cabinets with closed vents causes the internal temperature of the monitor rise, which not only reduces the life of the electrical parts but also causes malfunction.

* Locations with rain, snow, or excess humidity

Locationing the monitor in the above conditions will cause malfunction.

* Strong magnetic fields

4. Avoid exposing the CRT to sunlight

Subjecting the CRT to direct sunlight for a long period of time deteriorates the florescent faces of the CRT. So avoid use outdoors.

5. Avoid exposing to high luminance fixed image for long periods of time

Take care as this will cause burning of the CRT.

Also avoid displaying remote numbers in the remote entry state (remote numbers are displayed when the wireless remote controller is used) for long periods of time. When not using the wireless controller, set the remote number displayed on the screen to OFF.

Guarantee

Malfunctions occurring in normal use within one year from the date of purchase will be repaired free of charge. This does not apply to the fuses.

If no image is displayed after user adjustment or if malfunction is suspected, contact your nearest Ikegami dealer.

Accessories

This monitor is provided with the following accessories.

Check that none is missing.

- 1. Operation manual
- 2. AC cable
- 3. Remote connector

^{*} Specifications and external dimensions are subject to change without prior notice.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS

Precautions Upon Use

1. Outline	1	4. User Adjustment	14
1-1 Outline	1	4-1 Power Supply	14
1-2 Features	1	4-2 Names and Functions of	
		Front Left Panel Parts	14
2. General Specifications	3	4-3 Names and Functions of	
2-1 Common Specifications	3	Front Controller Parts	15
(1) General	3	(1) Names and functions of front panel parts	15
(2) Video Signals System	3	(2) Names and Functions of Drawer	
(3) Brightness and Contrast	3	Panel Controls	18
(4) Deflection/Sync System	3	4-4 Storing and Changing Data in the	
(5) Functions		Memory	22
(6) Memory	4	(1) Storing and changing the PRESET data	22
(7) Applicable Standards	4	(2) Changing and storing the FILE DATA	23
2-2 Individual Specifications	4	4-5 Types of Markers	24
(1) YPbPr/RGB input module	4	4-6 Adjustment Procedure	25
(2) Multi-format SDI input module	5	(1) Adjusting the brightness	25
(3) SD-SDI input module	6	(2) Adjusting the contrast	25
(4) Decoder input module	6	(3) Adjusting the white balance	25
(5) Audio level meter module	6	(4) Adjusting the color balance	27
2-3 Options	7	(5) Adjusting the focus	27
2-4 External View	8	(6) Adjusting the rotation	28
(1) HTM-1990R	8	(7) Adjusting the screen centering	28
(2) HTM-1990R		(8) Adjusting the screen distortion	29
(with DAM-504/508,MK-1905)	9	(9) Adjusting the screen size	29
		(10) Adjusting the moiré effect	30
3. Installation	10	4-7 MENU Functions	31
3-1 External connection	10	(1) List of MENU	31
(1) Standard module	10	(2) Flow of MENU Operations	32
(2) Multi-format SDI input module	11	(3) Description of MENU 1 Functions	34
(3) SD-SDI input module	12	(4) Description of MENU 2 Functions	34
(4) NTSC/PAL-B decoder input module	12	(5) Description of MENU 3 Functions	35
3-2 Parallel Remote Connection	13	(6) Description of MENU 4 Functions	36
(1) Pin function	13	(7) Description of MENU 5 Functions	36
(2) Connectors used	13	(8) Description of MENU 6 Functions	37
		(9) Description of MENU 7 Functions	37
		4-8 Messages Displayed on the Screen	38
		5. Installation of Options	39
		5-1 Option Module	39
		5-2 Rack Mount Adapter	40
		5-3 Remote Controller	41
		(1) RCT-30A Infrared Remote Controller	41
		(2) SRC-301Z Serial Remote Controller	42

6. Memo 43

HTM-1990R Multi-Format Color Monitor

1. Outline

1-1. Outline

This monitor is designed to get HDTV signals formatted and mixed with SDTV signals. The **professional 19" multi-format color monitor** is intended for effective uses in limited space: on broadcast substation's editing and monitoring racks, on sending control console, and in relay vehicle, to name a few.

The CRT adopts a flat tube with the dot trio pitch of 0.25 mm, which gives very fine images and substantially suppresses external light reflection. The black matrix screen provides for high contrast.

To meet diversified broadcast formats and system needs, the 1080i, 1035i and 720p HDTV signals and the 480p SDTV signal can be handled, whereas the NTSC, PAL-B and multiple TV formats are coped with (including options). In addition to conventional analog component signals and composite signals, the HDTV as well as SDTV serial digital (SDI) signals are also readily handled.

A wide range of optional modules are of plug-in type. By simply inserting the module without having to open the body cover, the system can be readily modified and expanded and also easy to maintain.

The SDI modules are compatible with not just multiformat inputs, but also embedded audio signals. The embedded audio capability provides the outputs of analog or AES/EBU digital signal. The monitor itself may also be equipped with an audio level meter. The highly cost-effective master monitor can monitor images and sound at once in its single body.

Compliant with the latest RoHS that is a safety directive for green products, this monitor is eco-friendly and human-friendly.

1-2. Features

Multi-format

The monitor supports the following broadcasting formats.

• 480i/59.94: ITU-601 • 575i/50: ITU-601

•480p/59.94: SMPTE293M (Option) •1035i/60,59,94: SMPTE240M, BTA S-001B

• 1080i/60,59,94: SMPTE274M • 1080i/50: SMPTE274M

•1080p/24sF,23.98sF: SMPTE RP211 (Option)

•720p/60, 59.94: SMPTE296M

•720p/50: SMPTE293M (Option)

Multi-format SDI

The Multi-format SDI module (**DKM-501A/B** (optional)) is capable of accepting both HD-SDI and SD-SDI (4:2:2) signals in the same input terminal.

The monitor automatically identifies HD-SDI or SD-SDI (4:2:2) signal input for display in appropriate format.

Compatibility with embedded audio output

Equipped with demultiplexer circuit, the optional multi-format SDI module (AV or AVD type), which supports embedded audio output, can extract and output the audio signal multiplexed with HD-SDI signal or SD-SDI (4:2:2) signal.

The module is available in two types in terms of its audio output, **AV type** producing 2-channel analog output (output channel to be set in MENU) and **AVD type** producing AES/EBU digital 8-channel output.

Embedded audio level meter

DAM-504 and **DAM-508** (optional) are the audio level meters that work with the embedded audio to monitor 4-channel or 8-channel audio signal multiplexed with SDI signal.

Easily visible LED meter installed in the escutcheon will not obstruct video monitoring. Integrated with the monitor, the meter requires no extra space.

Remote control functions

The monitor can be remote-controlled with the use of three remote control functions. Depending on the place of installation and type of operation, a parallel, infrared, or serial remote controller can be used.

In addition to the conventional parallel remote control, the monitor also comes equipped as standard with serial remote input interface which enables remote control with just one BNC coaxial cable.

By connecting various monitors (17/18/20/30/80/90/HTM, HLM series monitors) by the loop-through method, up to 99 monitors can be remote-controlled individually, using the optional remote controller SRC-301Z (option).

The infrared wireless remote controller **RCT-30A** (option) is also available as an option.

Digital control

Digital data is processed in 10-bit. The rotary encoder enables easy adjustment and changes to the data.

The screen size and position, as well as, side pin compensation can also be controlled remotely, thus allowing flexible compatibility with various signal formats.

Memory of 4 different of color temperatures

As the monitor is able to memorize other color temperatures in addition to the D93/D65 color temperatures set as default, the optimum white balance can be set promptly, as well as, easily according to the input image conditions and purpose of use.

BFS (Beam feedback system)

By adopting a BFS circuit for detecting CRT cathode current, stable black balance can be obtained for a long period of time even when the CRT emission changes.

Rich variety of internal test signals

The monitor is equipped with a variety of useful test signals for adjustments such as crosshatch, flat field (50%), window (100%), character, and staircase waveform with pluge.

The format of the test signal can also be selected from HDTV:1080i/1035i/720p, SDTV:480i/575i by MENU settings.

Built-in markers

4:3 markers can be displayed on 16:9 images. 80%, 88%, 90%, 93%, 100% and other markers can be displayed for the 4:3/16:9 aspects in NTSC.

Shadow function

While displaying pictures with an aspect ratio of 16:9, the monitor displays 4:3, 13:9, and 14:9 image areas and creates a shadow (the shadow contrast is set up to about 40%) at the other image portion. This monitor is capable of viewing 4:3, 13:9, and 14:9 images simultaneously while monitoring 16:9 images.

As this shadow function can be turned on and off by remote control, prompt switching is realized.

Degauss timer function

The degauss timer function sets the timer so that auto degauss operations are performed automatically about 4 seconds after the power is turned ON. The timer can be set for each monitor at intervals of 0.5 seconds from 0 to 4.5 seconds.

This minimizes the rush current flowing when the power of a system comprised of multiple monitors is turned on at once.

Structure with enhanced maintenance and expendability

The signal processing module (including optional modules) is of the plug-in type which can be easily disconnected and reconnected from the back without having to remove any cover, thus allowing easy maintenance.

Besides the analog component (YPbPr/RGB) module the unit comes standard equipped with, up to 4 different types of optional modules can be added for expansion.

Use of high performance in-line gun CRT

A high performance in-line gun CRT of 0.25mm dot mask pitch is adopted to produce fine images with reduced reflection of external light.

A black matrix screen realizes images of high contrast with enhanced black purity.

Luminance compensation function by image size

In the case of the CRT monitor, when the image size is reduced from normal to under-scan or from 4:3 to 16:9 scan image size, the current density increases to cause a change of luminance. This monitor performs luminance compensation so that the luminance remains constant even when any of the four image sizes is changed.

HD 4:3 SCAN function

This function enlarges 4:3 image area only and displays it in full screen (aspect ratio 4:3) during the HDTV mode, thus allowing real-time monitoring of the image that would be obtained after down-converting to 4:3 aspect ratio of SDTV. During the HD 4:3 SCAN, the size of the 4:3 image area is magnified to the size comparable to the size of 24-inch 16:9 CRT screen.

High voltage regulation circuit

High voltage regulation circuit controls the pulse for each scan line, thus realizing the high voltage stability of $\pm 0.5\%$. This regulation circuit ensures quicker response and minimal distortion in high luminance, resulting in an image of high stability.

Auto setup function

Use of the auto setup probe **ASP-80** (optional) enables automatic adjustment of the color temperature easily.

When the operator sets the desired color temperature to the monitor, any number of monitors can be automatically adjusted to this color temperature.

Chroma upgrading function

The chroma control's maximum level has been increased from +6 dB to +12 dB.

2. General Specifications

2-1. Common Specifications

(1) General

1. Power supply:

AC single phase, 50/60 Hz

Within 100V area: 100V-120V ±10% Within 200V area: 200V-240V ±10%

2. Power consumption:

Max. 240W (with full options)

3. Ambient temperature:

 0° C to $+40^{\circ}$ C

4. Humidity:

Below 90% (No condensation)

5. Dimensions and weight:

450(W) x 399(H) x 515(D)mm, Approx. 38.5kg

6. Standard accessories:

Power cable, remote connector, operation manual x 1 each

7. **Operation:** Continuous

8. **X-ray:** Less than 0.1mR/H

(Anywhere $50\,\mathrm{mm}$ or remoter from

the monitor)

(2) Video Signals System

1. Frequency response:

When inputting YPbPr

a) **HDTV** (When inputting YPbPr)

60Hz~25MHz: ±1dB

25MHz~30MHz: +1dB/-3dB

More than 30MHz: Descending response

b) **SDTV** (Input with DE-801 mounted)

60Hz \sim 25MHz: +1dB/-3dB

More than 10MHz: Descending response

c) **SDTV** (Input with DE-811 mounted)

 $60Hz\sim5.75MHz: +1dB/-3dB$

More than 5.75MHz: Descending response

2. **Sag:** Within 5%

3. Black level stability:

For 10% to 90% APL changes: Within 1%

4. Aperture correction amount:

Variable +6dB or more at the frequency below

a) **HDTV** 16.6MHz

b) **SDTV** 4MHz

(for both VBS and component signals)

5. Noise

Sync noise: More than -46dB Hum noise: More than -50dB Others: More than -50dB

(3) Brightness and Contrast

1. **CRT**

Dot trio pitch: 0.25mm

2. Horizontal resolution

More than 950 lines (480i/575i/1080i) with YPbPr input and 120 cd/m² in screen center

3. Preset contrast (Factory setting)

More than 120 cd/m² (35ft-L)

4. Maximum luminance

a) $\boxed{\text{SDTV}}$ (4:3) : 170 cd/m² (typ) b) $\boxed{\text{HDTV}}$ (16:9) : 240 cd/m² (typ)

(100% window signal input, brightness: PRESET, contrast: MAX)

(4) Deflection/Sync System

1. 16:9 display size

a) **NORMAL:** 1% over size

b) **UNDER:** 4:3 and 16:9 ratios with the width

of 360 mm

2. **Deflection**

a) SDTV

NORMAL SCAN: (4:3/16:9) UNDER SCAN: (4:3/16:9)

b) **HDTV**

NORMAL SCAN: (16:9) UNDER SCAN: (16:9)

HD 4:3 SCAN: (Zoom for 4:3 area)

3. Deflection distortion

Within ±1% of screen height (Deflection linearity and raster distortion)

4. Sync stability

Monitor sync keeps stable under the following input conditions:

Internal sync: ±6dB of rated video input level External sync: External sync input level 0.3 to 6Vp-p

5. High voltage

Generated voltage: $26kV \pm 1kV$

High voltage fluctuation:

Within ±0.5% (150µ A reference)

Beam current range within 0 to 600μ A

6. Convergence

Inside the center circle of screen height diameter: Within 0.3mm

The rest of the screen area: Within 0.4mm

(5) Functions

1. Marker function

- a) Center marker: Set to ON/OFF using MENU settings
- b) Safe title

The following markers are displayed according to the aspect (4:3/16:9).

() indicates the aspect when markers are displayed.

`	, 1	1 0
•	80%+100%	(4:3/16:9)
•	88%+100%	(4:3/16:9)
•	90%+100%	(4:3/16:9)
•	93%+100%	(4:3/16:9)
•	5 divided crosshatch	(4:3/16:9)
•	10 divided crosshatch	(4:3/16:9)
	patterns with respect to effective	ve viewing area:
	80, 85, 88, 90, 93 and $100%$	

• Cross	(4:3/16:9)
• 14:9 marker	(16:9)
• 13:9 marker	(16:9)
• 4:3 marker	(16:9)
• 4:3 marker + 80% (4:3) marker	(16:9)

2. Shadow function

The following shadow is created in the 16:9 mode.

- 14:3 marker + 14:3 shadow
- 4:3 marker + 80% (4:3) marker + 4:3shadow
- · 4:3 shadow
- 13:9 marker + 13:9 shadow
- · 13:9 shadow
- 14:9 marker + 14:9 Shadow
- · 14:9 Shadow

3. Auto setup

The white balance can automatically be adjusted using the auto setup probe **ASP-80** (option).

4. Remote control

a) Parallel remote control channel

COMPOSITE/AUX/HD-SDI/SD-SDI, YPbPr/RGB, COLOR/MONO, SYNC INT/EXT, 4:3/16:9, 4:3 MARKER ON/OFF, 4:3 SHADOW ON/OFF, R/G.TALLY ON/OFF

b) Serial remote control

The input interface is equipped as standard and is capable of controlling most of the monitor functions. The controller **SRC-301Z** is optional.

c) Infrared remote control

The infrared remote controller **RCT-30A** is optional.

5. Internal test signal

The format can be switched by MENU settings.

- Crosshatch
- · 50% flat field
- · 100% window
- · Characters
- · Staircase waves with pluge signal

6. Beam feedback system (BFS)

7. Menu assist

- Input signal format setting
- RGB/YPbPr switching setting
- · Test signal format setting
- · Marker center cross display ON/OFF setting
- · Marker color setting
- · Remote ID setting
- · Degauss timer setting
- % display of preset data
- · Password setting
- · Auto setup setting
- riato setap setting
- · Embedded audio related setting

(6) Memory

1. Memory type

ROM: 64KB programmable ROM RAM: 32KB static RAM

2. Battery backup

Memory backup time: 10 years or longer Battery: BR2330-1HF lithium battery

(7) Applicable Standards

1. Safety standards: Conforms to UL60950-1

2. Electromagnetic interference: Conforms to FCC Class-A

3. X-ray radiation: DHHS

2-2. Individual Specifications

* Standard equipped with YPbPr/RGB one-input module only.

(1) YPbPr/RGB input module (Standard)

YPbPr/RGB 1-input module

1. Input/output terminal

a) YPbPr/RGB: BNC 1 line (Loop through) Sync signal input: BNC 1 line (Loop through)

2. Input signal format (YPbPr/RGB)

a) SDTV

- · 480i/59.94
- 575i/50
- 480p/59.94 (option)

b) **HDTV**

- · 1035i/60,59.94
- · 1080i/60.59.94
- · 1080i/50
- 1080p/24sF, 23.98sF (option)
- · 720p/60, 59.94
- 720p/50 (option)

3. Input level

a) **HDTV** (BTA S-001B)

• Y, G, B, R input V: 700mVp-p Positive polarity

 $S: \pm 300 \text{mVp-p}$

• Pb, Pr input V: ±350mVp-p Positive polarity

• Sync input: ±300mVp-p

b) **SDTV** (SMPTE/EBU N10)

• RGB input VS: 1.0Vp-p Positive polarity

V: 0.7Vp-p Positive polarity

* When all or none of R, G and B have sync signals, and when only G has sync signal.

YPbPr input

Y signal WHITE (100%): 700 mVp-pSET UP: 0 mVp-pSYNC: 300 mVp-pPbPr signal: 525 mVp-p

(100/0/75/0 COLOR BAR)

• Sync input: 0.3-6Vp-p Negative polarity

4. Input impedance

High impedance bridge connection or 75Ω termination

 $(75\Omega \text{ termination plug is optional.})$

5. Return loss

More than 46dB (10MHz)

(2) Multi-format SDI input module (Option)

Equipped with high performance $x/\sin x$ correction type video signal post-filter

• **DKM-511B** (Multi-format SDI module)

For preview monitor

DKM-511AAV/BAV

(Multi-format SDI module supporting embedded analog audio output)

DKM511AAVD/BAVD

(Multi-format SDI module supporting embedded AES/EBU audio output)

Video section

1. Input/output terminal

Input: BNC 2 lines

Output: BNC 1 line (Active loop through for only

one line selected)

2. Input signal format (HD/SD auto detection)

a) HD-SDI

1035i/60,59.94

· 1080i/60,59.94

· 1080i/50

• 1080p/24sF, 23.98sF

(When supported by the monitor)

· 720p/60,59.94

• 720p/50

b) SD-SDI(4:2:2)

· 480i/59.94

· 575i/50

3. **Input level rating:** 800mVp-p±10%

4. Transmission speed

a) HD-SDI: 1.485Gb/s
b) SD-SDI(4:2:2): 270Mb/s
5. Quantization bit rate: 10 bits

6. Input/output impedance: 75Ω

7. **Return loss:** More than 15dB(~742.5MHz)

More than $10dB(742.25\sim1485MHz)$

8. Transmission distance:

Over 100m (5CFB, 1.485Gb/s)

| Audio section (AV / AVD type) |

Common specifications for embedded audio

1. Compatible embedded audio input formats

SMPTE272M: 480i/59.94(4:2:2)

575i/50(4:2:2)

SMPTE299M: 1035i/60,59.94

1080i/60,59.94

1080i/50

1080 p/24 sF, 23.98 sF

720p/60,59.94 720p/50

2. **Format switching:** Auto switching

3. Sampling frequency: 48kHz (Synchronized

with video clock)

Analog audio output (AV type)

* Analog audio level 0dbs 0.775Vrms

1. Output terminal:

XLR-5-32 type (Canon 5-pin male)

2. Line output: Analog audio 2-channel

Active (no-transformer) balanced

output type

3. Rated output level:

+4dBs * Load impedance $10k\Omega$ (At -20dBFS digital audio level)

4. Max. Output level:

8. Emphasis:

+24dBs * Load impedance $10k\Omega$ (At 0dBFS digital audio level)

5. Output impedance: 50Ω 6. Min. Load impedance: 600Ω 7. Quantization bit rate: 24 bits/ch

50/15µs digital emphasis (Auto detection)

9. Frequency response: 20~20KHz±1dB 10. S/N ratio: More than 80dB 11. Dynamic range: More than 80dB 12. Crosstalk: More than 60dB

(1kHz, Max. Output)

13. **Harmonic distortion:** Less than 0.1%

(Rated output)

AES/EBU output (AVD type)

* Digital audio level 0dBFS, full bit in full scale

1. Output connector:

BNC (Paired channel) 4 lines

2. Output standards:

AES/EBU standards (for monitor)

3. Output impedance: 75Ω

(3) SD-SDI input module (Option)

• **DK-801A** (4:2:2 digital component module)

* Not supporting embedded audio

1. Input/output terminal:

BNC 2 lines (Active loop through)

* The module can be preset to produce output signal corresponding to the channel selected on the monitor.

2. Input signal format:

4:2:2 digital component signal (480i/59.94, 575i/50)

3. Input/output level:

Rated level: 800mVp-p±10% (75Ω termination

for output level)

Scrambled NRZI system

Transmission speed: 270Mb/s
 Quantization bit rate: 10 bits
 Input/output impedance: 75Ω

7. **Return loss:** More than 15dB

(~270MHz)

(4) Decoder input module (Option)

• DE-801 NTSC decoder module

· DE-811 NTSC/PAL-B decoder module

1. Input/output terminal: BNC 3 lines (Loop through)

2. Signal format: NTSC/PAL-B composite signal

3. Input level:

VS:1.0Vp-p Positive polarity V:0.7Vp-p Positive polarity

4. Input impedance:

High impedance bridge connection or 75 termination (75 Ω termination plug is optional.)

5. **Return loss:** More than 46dB (10MHz)

(5) Audio level meter module (Option)

· DAM-504 4ch Embedded audio level meter

• DAM-508 8ch Embedded audio level meter

* DAM-504/508 requires DKM-511 *AV/*AVD.

1. Compatible embedded audio input formats

SMPTE272M: 480i/59.94(4:2:2)

575i/50(4:2:2)

SMPTE299M: 1035i/60,59.94

1080i/60,59.94

1080i/50

1080p/24sF, 23.98sF 720p/60,59.94 720p/50

2. Format switching: Auto switching
3. Reference level: -20dBFS

4. Number of channels: DAM-504: 4 channels

DAM-508: 8 channels

5. **Display segment:** 13 segments

6. **Display device:** -∞~-25dB : Green LED

-20~0dB: Amber LED

2-3. Options

1. **DKM-511A**

Equipped with a high-performance post-filter to make x/sin x corrections on the two-input module HDTV video signal of the Multi-SDI (HD-SDI/4:2:2).

2. **DKM-511B**

Multi-SDI (HD-SDI/4:2:2) two-input module. Equipped with filter supporting the preview function.

3. **DKM-511AAV/BAV**

Multi-SDI two-input module compatible with 2 embedded analog audio outputs.

4. DKM-511AAVD/BAVD

Multi-SDI two-input module compatible with 8 embedded AES/EBU audio outputs.

5. **DAM-504/508**

4-channel/8-channel embedded audio level meter display module.

6. **DK-801A**

4:2:2 digital component two-input module.

7. **DE-801**

NTSC 3-line comb decoder three-input module.

3. **DE-811**

NTSC/PAL-B 3-line comb decoder three-input module.

9. SRC-301Z

Serial remote controller

By connecting various monitors by the loopthrough method, up to 99 types of monitors can be remote-controlled.

10. **RCT-30A**

Infrared remote controller. For remote settings.

- 11. **EX-801A** Extender board for adjustment
- 12. **MK-1905** 16:9 mask

13. **RS-2020/S**

19/20-inch rack mount adapter RS-2020S has a sliding rail.

14. **XH-264** 19/20-inch hood

Table 2-3. All combinations of optional slots


Module	DKM-511** [®]	DKM-511 % AV®	DKM-511%AVD [®]	DK-801A	DE-801	DE-811
Slot width	1	2	2	1	1	1
No. of inputs	Multil-SDI x2	Multi-SDI x2	Multi-SDI x2	4:2:2 x2	NTSC x3	NTSC/PAL-B x3
No. of outputs	Multil-SDI x1	Multi-SDI x1 Embe. Analog Audio x2ch	Multi-SD x1 Embe. AES/EBU Audio x8ch	4:2:2 x2	NTSC x3	NTSC/PAL-B x3
Combination 1	•	_	_	•	_	_
Combination 2	•	_	_	_	•	_
Combination 3	•	_	_		_	● ²
Combination 4	•	_	_	•	•	_
Combination 5	•	_	_	•	_	•2
Combination 6	•	-	-	_	•	•3.4
Combination 7	•	_	_	•	•	●3.4
Combination 8	_	(Any one of the modules)		•	_	_
Combination 9	_	(Any one of	of the modules)	_	•	_
Combination 10	-	(Any one of the modules)		_	_	● ²
Combination 11	_	(Any one of	of the modules)	•	•	
Combination 12	_	(Any one of the modules)		•	_	•2
Combination 13	_	(Any one of	of the modules)	_	•	●3.4
Combination 14	_	(Any one of	of the modules)	•	•	●3.4

■ Notes


- ① Two or more DKM modules cannot be installed together.
- 2 Monitor's ROM version must be upgraded.
- ③ If the monitor's ROM version is not upgraded, the DE-811 settings provide for operation in PAL-B mode only. For details, refer to the DE-811 Instructions.
- ④ When the monitor's ROM version is upgraded, the DE-811 settings provide for operation in both NTSC and PAL-B modes. For details, refer to the DE-811 Instructions.

2-4. External View

(1) HTM-1990R

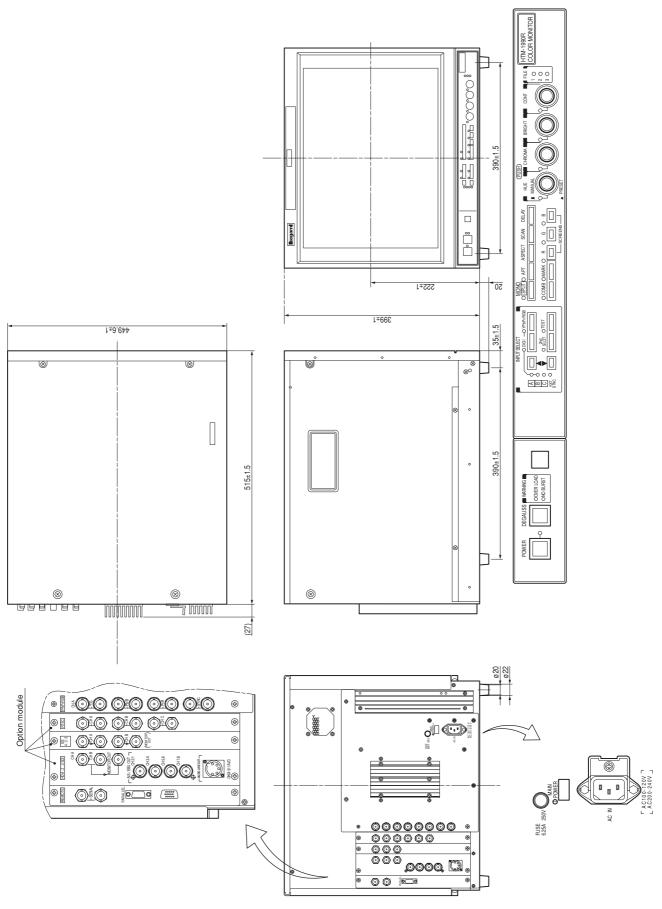

(2) HTM-1990R (with DAM-504/508,MK-1905)

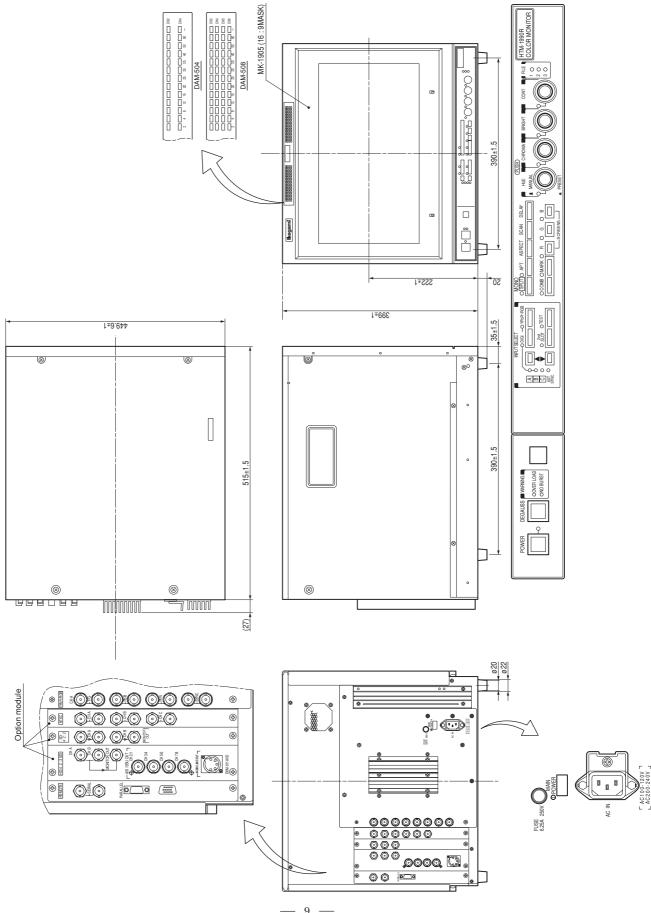


3. Installation

Caution: For your safety, turn off the power of each equipment before connection.

3-1. External connection

(1) Standard module (MPU, VIDEO PROCESS)

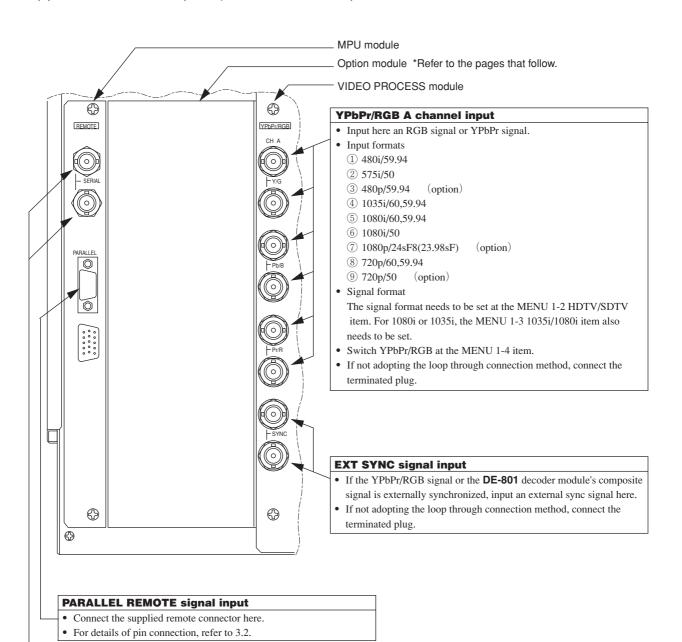


SERIAL REMOTE signal input


- Connect the BNC cable from the serial remote controller **SRC-301Z** here.
- By adopting the loop through connection method, up to 99 monitors can be controlled individually or together.
- If not adopting the loop through connection method, connect the terminated plug.
- Set the monitor ID in the MENU screen.

(2) Multi-format SDI input module


DKM-511*

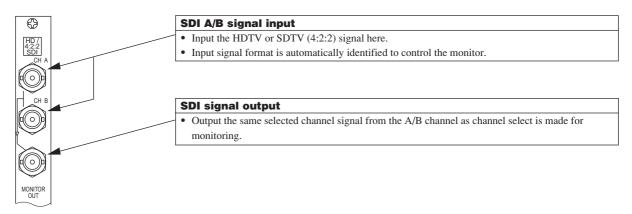

DKM-511*AV (compatible with 2 embedded analog audio outputs)

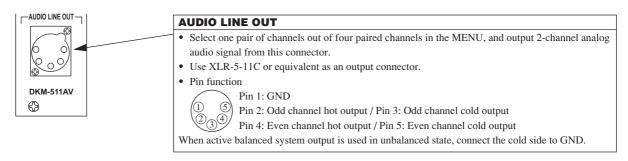


DKM-511*AVD (compatible with 8 embedded analog audio outputs)

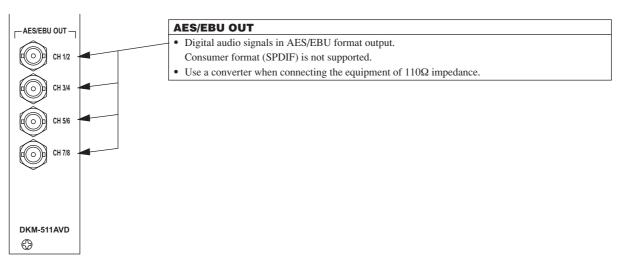



(3) SD-SDI input module

DK-801A

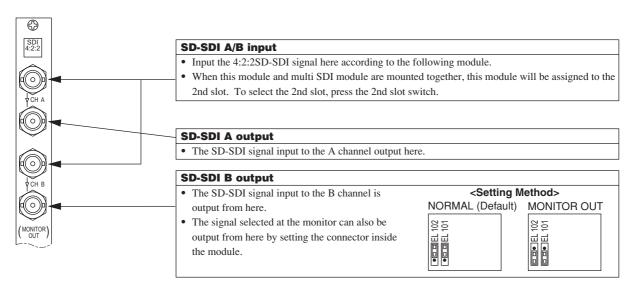


(4) NTSC/PAL-B decoder input module

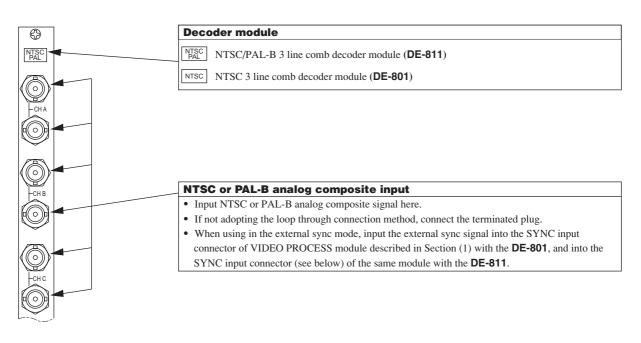

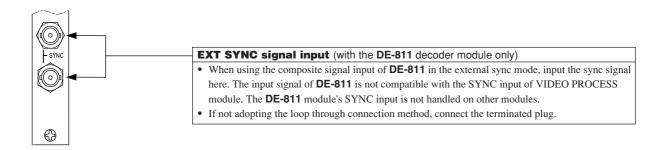


3-2. Parallel Remote Connection

(1) Pin function

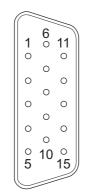

<Connector Face View on Rear Panel>

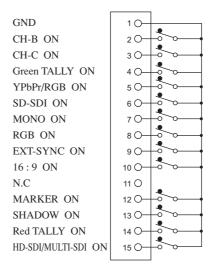

<Wiring of Remote Connector>

Pin No.	No. Function		External Assignment for Function
1	GND	ON	Connecting remote terminals to this pin enables ON control.
0	2 CH-B ON		Connect to Pin 1 to select B channel.
2	Сн-в	ON	* When Pins 2 and 3 are both OPEN, the A channel will be selected.
3	CH-C	ON	Connect to Pin 1 to select C channel.
5	CH-C	ON	* When Pins 2 and 3 are both OPEN, the A channel will be selected.
4	Green TALLY	ON	Connect to Pin 1 to set G TALLY to ON.
			Connect to Pin 1 to select the component video (YPbPr/RGB) input.
5	YPbPr/RGB	ON	Use together with Pin 2 to switch between channels A and B.
5	IFDFI/NGD	ON	* When Pins 5, 6 and 15 are all OPEN with DE-811 mounted, the analog
			composite will be selected.
			Connect to Pin 1 to select the digital video (SD-SDI) input.
6	SD-SDI	ON	Use together with Pin 2 to switch between channels A and B.
0	SD-SD1	ON	* When Pins 5, 6 and 15 are all OPEN with DE-811 mounted, the analog
			composite will be selected.
7	MONO	ON	Connect to Pin 1 to switch the COLOR/MONO setting to MONO.
8	RGB	ON	Connect to Pin 1 to switch the YPbPr/RGB setting to RGB.
9	EXT-SYNC	ON	Connect to Pin 1 to switch the analog input sync to external sync (EXT SYNC).
			Connect to Pin 1 to switch the aspect (4:3/16:9) setting to 16:9.
10	16:9	ON	When the aspect is set to 4:3 for HDTV signal, [HD4:3 SCAN] mode is entered.
10	10.9	ON	If the setting is to be controlled simultaneously with channel switching, set
			[CHANGE ASPE] to [MANUAL] in MENU 2-4.
11	N.C		No connection
12	MARKER	ON	Connect to Pin 1 to set 4:3 MARKER to ON.
13	SHADOW	ON	Connect to Pin 1 to set SHADOW to ON.
14	Red TALLY	ON	Connect to Pin 1 to set Red TALLY to ON.
			Connect to Pin 1 to select the HD-SDI or Multi-SDI input module.
15	HD-SDI/Multi-SDI	ON	Use together with Pin 2 to switch between channels A and B.
10	11D-0DIMINIO-0DI	OIN	* When Pins 5, 6 and 15 are all OPEN with DE-811 mounted, the analog
			composite will be selected.

(2) Connectors used (Standard accessories)

D-sub 15-pin (male) mini type

Connector: HDB-15M (3011-15) Made by Japan Aviation Electronics Industry
 Case: HE-C8-J9-F2-1 Made by Japan Aviation Electronics Industry

4. User Adjustment

4-1. Power Supply

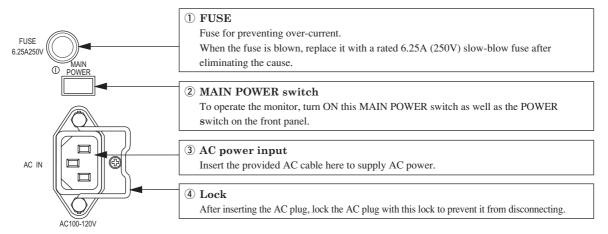


Fig. 4-1.
POWER Section on Rear Panel

4-2. Names and Functions of Front Left Panel Parts

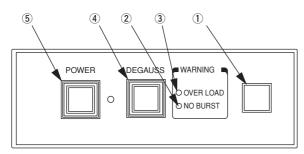


Fig. 4-2 Front Left Panel

1 Infrared sensor

Infrared sensor for the optional wireless remote controller RCT-30A.

2 NO BURST LED

LED which operates only when the composite signal input is selected. The LED lights up when the selected composite signal has no burst (black and white signal) or when the color killer circuit is activated.

3 OVERLOAD LED

This LED lights up when the ABL circuit is activated (the luminance is higher than necessary).

Using the monitor in a way which causes this LED to light up continuously for a long time will deteriorate the CRT. Therefore use the monitor with the luminance lowered.

4 DEGAUSS switch

When the power is turned ON, CRT demagnetization will be performed automatically. This switch allows demagnetization to be performed at one-touch.

As pressing this switch continuously has no effect, release and press again 2 to 3 minutes later.

5 POWER switch, LED

Switch for turning the monitor power ON/OFF. The LED is ON when the power is turned ON. Always turn ON the **MAIN POWER switch** on the rear panel when starting the monitor. Normally turn ON/OFF using this switch.

4-3. Names and Functions of Front Controller Parts

(1) Names and functions of front panel parts

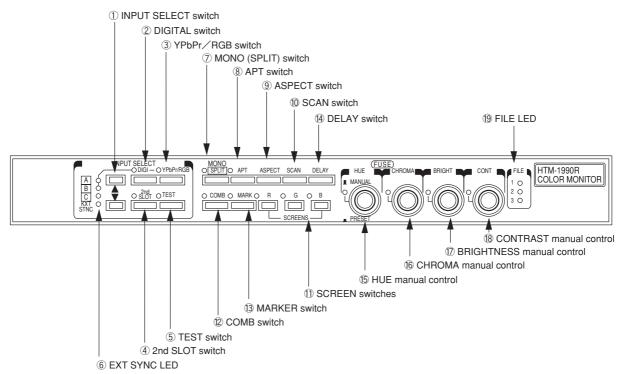


Fig. 4-3-1. Front Panel

Meaning of abbreviations in the following description

• SDTV: 480i, 575i

HDTV: 1035i, 1080i, 480p, 720p
SD-SDI: SDTV(480i,525i)SDI

HD-SDI: HDTV(1035i,1080i,720p)SDI

1 INPUT SELECT switch

- Use the ▼ and ▲ switches to switch the input channels A/B/C of each module. The switching depends on the number of inputs with each module.
- As the SYNC INT/EXT setting is memorized by channel (A, B, C, YPbPr/RGB-A or YPbPr/RGB-B) for analog inputs, it is switched automatically together with the channel switching.
- As the ASPECT 4:3/16:9 setting is memorized by channel (A, B, C, YPbPr/RGB-A, YPbPr/RGB-B, SDI-A or SDI-B) irrespective of the format, it is switched automatically together with the channel switching.

2 DIGITAL switch

- Set to ON when selecting the MULTI-SDI, HD-SDI or SD-SDI module.
- The switching method differs as follows according to the mounting state of the SDI module.
- a) When only one SDI module is mounted. Set the DIGITAL switch to ON.

- b) When two SDI modules are mounted. MULTI-SDI or HD-SDI can be selected only with the DIGITAL switch. To select SD-SDI, set the 2nd SLOT switch to ON as well.
- As the ASPECT 4:3/16:9 setting is memorized by channel irrespective of the format, it is switched automatically together with the channel switching.

3 YPbPr/RGB switch

- Set to ON when selecting the YPbPr/RGB input.
- Switch between YPbPr and RGB at the MENU 1-4 item.
- As the SYNC INT/EXT setting is memorized by channel (A or B) for YPbPr/RGB, it is switched automatically together with this switch. Two channel (A or B) is option.
- As the ASPECT 4:3/16:9 setting is memorized by channel irrespective of the format, it is switched automatically together with the channel switching.

4 2nd SLOT switch

- When there are two SDI modules (Ex: DKM-511+DK-801A) or two decoder modules (Ex: DKM-511+DE-811), switch to the second slot using the 2nd SLOT switch.
- a) For SDI module

The **DK-801A** is assigned to the 2nd SLOT.

b) For decoder module

The **DE-811** is assigned to the 2nd SLOT.

5 **TEST** switch

- Turn ON to switch to the internal TEST signal.
- The following standard TEST signal formats are provided.

Switch the format at the MENU 1-5 item.

480i(525i)/59.94

575i(625i)/50

480p/59.94(Only when supported by the monitor) 1035i/60

1080i/60

1080i/50

1080p/24sF (1080i/48) (Only when supported by the monitor)

720p/60

720p/50 (Only when supported by the monitor)

- * The description in parentheses appears on the MENU.
- As the ASPECT 4:3/16:9 setting is memorized irrespective of the format, it is switched automatically when the new setting is done.
- Every time the switch is pressed, the output will cycle over the following five types of signals.

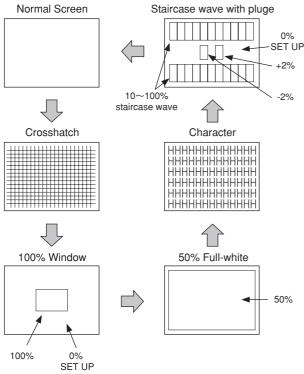


Fig. 4-3-2. TEST Signal

6 EXT SYNC LED

 The LED lights up when SYNC INT/EXT is switched to EXT.

(7) MONO (SPLIT) switch

- Set the MONO switch to ON when the color signal is to be viewed in the black/white state.
- When the MONO switch is ON with the NTSC composite signal (**DE-811** module) selected, the luminance (Y) signal is usually filtered with a comb or trap filter. If the FORCED switch in the drawer panel is turned on, the wide-band MONO mode with unfiltered flat frequency characteristic is called up.

• COLOR/MONO SPLIT

When the MONO switch is pressed for 2 to 3 seconds, the split screen (upper half of the screen is color, while the lower half is black/white) mode will be set. Press this switch again, and the color mode is resumed.

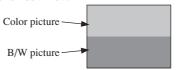


Fig. 4-3-3. COLOR/MONO SPLIT ON State

8 APT switch

• Turn ON the APT switch when correcting aperture.

9 ASPECT switch

- Aspect ratio is switched between 4:3 and 16:9.
- In the HDTV signal mode for 16:9 image, the 4:3 area image is displayed with enlargement.
- When [CHANGE ASPE] is set to [AUTO] in MENU 2-4, the aspect settings are memorized in the following seven input channels and there is no need to repeat the setting every time the input channel or signal format is changed. The setting is switched automatically together with the channel switching. In the case of the Multi-format SDI input, the aspect ratio data is memorized in each input signal (HD-SDI or SD-SDI) respectively. When HD-SDI (16:9) signal input at the channel A is replaced by SD-SDI signal, for example, the aspect ratio is automatically switched to the one previously set for that SD-SDI signal. To fix the aspect ratio setting, set [CHANGE ASPE] to [MANUAL].

<Channels for Memory>

- VBS input ch A / B / C
- 2nd VBS input ch A / B / C
- YPbPr/RGB inputs ch/A/B
- Multi SDI inputs ch/A/B (memorized in SD/HD-SDI respectively)
- 2nd SDI inputs ch/A/B

Ex: By setting the channel A to 4:3 and the channel B to 16:9 once, the ASPECT will be switched automatically each time the channel A/B is switched.

10 SCAN switch

• Use the SCAN switch to switch between normal scan and under-scan.

(1) SCREEN switch

 When displaying the individual R, G, B screen colors, turn ON the respective SCREEN switches for R, G and B. When the switches are all ON, the LEDs are all OFF.

(1) **COMB** switch (Only when **DE-811** is mounted)

- To operate the comb filter circuit, turn ON the COMB switch. To operate the trap filter circuit, turn it off
- Operation is enabled during the analog/digital (4Fsc) NTSC composite signal input.

(13) MARKER switch

- Turn ON the MARKER switch to display the various markers.
- Using the rotary encoder in the drawer of the front panel, select a marker given in the type of 4.5 markers.
- This switch also functions as the 4:3/13:9/14:9 shadow switch.

14 **DELAY** switch

 By pressing this switch, the horizontal/vertical blanking can be monitored. Every time the switch is pressed, the mode cycles as follows.

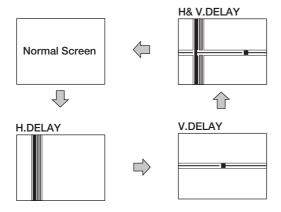


Fig. 4-3-4. DELAY Mode

(15) **HUE** manual control

 This control serves as a MANUAL/PRESET data selection switch as well as a manual data variable control.

The control pops out and is switched to the MANUAL state with each press (the LED lights).

- By rotating the control in this state, the manual data can be varied.
- HUE operates only for the analog/digital (4Fsc) NTSC composite signal.

16 CHROMA manual control

 This control serves as a MANUAL/PRESET data selection switch as well as a manual data variable control.

The control pops out and is switched to the MANUAL state with each press (the LED lights).

- By rotating the control in this state, the manual data can be varied.
- If the CHROMA UP switch in the drawer panel is turned on, the maximum level is upgraded from +6 dB to +12 dB.

(1) BRIGHTNESS manual control

 This control serves as a MANUAL/PRESET data selection switch as well as a manual data variable control.

The control pops out and is switched to the MANUAL state with each press (the LED lights).

 By rotating the control in this state, the manual data can be varied.

(18) CONTRAST manual control

 This control serves as a MANUAL/PRESET data selection switch as well as a manual data variable control.

The control pops out and is switched to the MANUAL state with each press (the LED lights).

 By rotating the control in this state, the manual data can be varied.

19 FILE LED

- The LED indicates the file selection status with FILE 1 to FILE 3 switches in the drawer panel.
 When no file is selected, the status is in REFERENCE.
- Default color temperature settings for FILE 1 to FILE 3 are as follows.

[Default Color Temperature Setting for Each File]

Reference: 6500kFile1: 6500kFile2: 9300kFile3: 6500k

(2) Names and Functions of Drawer Panel Controls

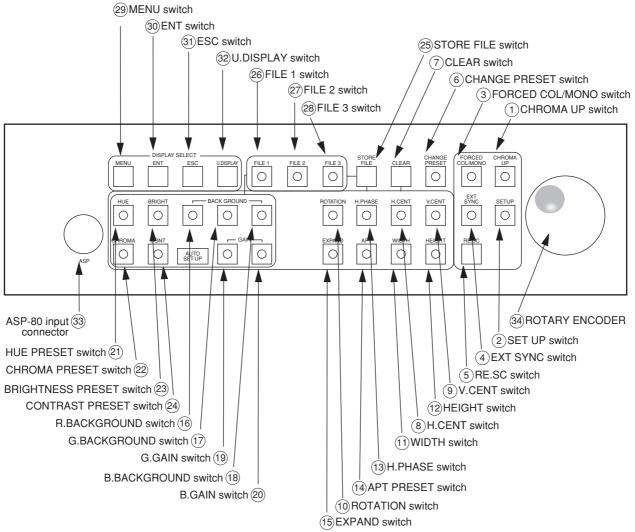


Fig. 4-3-5. Drawer Panel Controls

1 CHROMA UP switch


- Turn on the switch, and the chroma level is boosted up to +12 dB (with the chroma manual control at max).
- When adjusting the white balance on the camera's gray scale, just turn on this switch. The chroma component is more emphasized to finely adjust the camera.

Precautions

- To protect the circuitry, the switch is forced to turn off when the power is switched on. The switch turns itself off too when it has kept on for continuous 30 minutes or so.
- If a color bar signal or other chroma-rich signal is fed with this switch on, a CRT doming (deformed shadow mask due to heat) may occur and the colors may adversely change. Keep down the chroma or contrast level.

2 SET UP switch

• When set to ON (SET UP side/ LED is ON), the vertical deflection is reduced, facilitating adjustments of the black balance (R/G/B BACK GROUND).

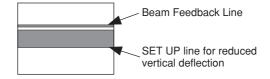

3 FORCED COL/MONO switch

(Functions only when the NTSC decoder is mounted)

• The function of this switch differs as follows according to the state of the MONO switch on the front panel. This switch functions only when analog/digital (4Fsc: D2/3) composite signals are input.

FORCED COL/MONO SWITCH	MONO SWITCH	Function			
		<auto color=""></auto>			
OFF	OFF	Switches the COLOR/MONO circuit operation			
		of the decoder automatically according to			
		whether burst is added to the composite signal.			
		<forced color=""></forced>			
ON	OFF	The COLOR circuit is operated forcibly			
		regardless of whether burst is added to the			
		composite signal.			
		<normal mono=""></normal>			
OFF	ON	Normal MONO state. In the case of the			
		composite signal, either the COMB or TRAP			
		filter circuit operates according to the state			
		of the COMB switch for composite signals.			
		<wide band="" mono=""></wide>			
ON	ON	Neither the COMB nor TRAP filter circuit			
		operates in the MONO state. Frequency			
		characteristics of the luminance signal are			
		in the full-flat state.			

4 **EXT SYNC** switch

 Set this switch to EXT when externally synchronizing the analog input signal. The switch does not function when digital signals are input.

5 **RE.SC** switch

(only when equipped with DE-811 module)

- Use the RESIDUAL SUBICULAR ON/OFF switch to check if the subicular is leaking to the signal input.
- Press this switch while observing the screen. If the phase (HUE) changes, it means that the subicular is leaking into the feedback line area.
 Releasing the switch automatically sets it to OFF.

6 CHANGE PRESET switch

- Press this switch to change or memorize the PRESET data.
- When pressed, all the PRESET LEDs in the frame start to blink. Select a blinking PRESET switch.
 When the LED stops blinking and stays lit on, the data can be changed using the rotary encoder.
 Press another PRESET switch to change another data
- Each PRESET data has the following individual data.

PRESET	FILE	FORMAT	SCAN	Q'ty of data
HUE		×	×	4
CHROMA	•	×	×	4
BRIGHT	•	×	×	4
CONT	•	×	×	4
G, B GAIN	•	×	×	4
R, G, B BKG	•	×	×	4
HEIGHT	×	•	•	17
WIDTH	×	•	•	17
H. CENT	×		● *1	8
V. CENT	×		×	5
H. PHASE	×	•	● *1	8
TRAPEZOID	×		×	5
SIDE PIN	×		×	5
MOIRE	×	•		17
ROTATION	×	×	×	1
APT	X	X	×	1

FILE : REFERENCE, FILE 1, FILE 2, FILE 3

FORMAT: 480i, 575i, 1035i, 1080i, 720p

SCAN : SDTV - 4:3normal, 4:3under, 16:9normal, 16:9under

HDTV - HD4:3SCAN, 16:9normal, 16:9under

SCAN*1 : HDTV - HD 4:3 SCAN, 16:9

- * While changing the PRESET data, do not switch the ASPECT, SCAN and the channels.
- * Activate the following PRESET switches by enabling their functions.

a) APT PRESET switch

Set the APT switch on the front panel to ON.

b) **HUE PRESET** switch

When the HUE MANUAL switch on the front panel is ON, set it to PRESET. The switch is enabled only when the NTSC composite signal is selected.

c) CHROMA PRESET switch

When the CHROMA MANUAL switch on the front panel is ON, set it to PRESET.

d) **BRIGHTNESS PRESET** switch

When the BRIGHT MANUAL switch on the front panel is ON, set it to PRESET.

e) **CONTRAST PRESET** switch

When the CONT MANUAL switch on the front panel is ON, set it to PRESET.

7 CLEAR switch

- Press this switch to select the item you want to change or clear the data in the PRESET screen displayed by operating the CHANGE PRESET switch and WHITE BALANCE switch.
- While changing any preset data, press this switch to clear the new data and restore the previous one.


8 H. CENT switch

 Switch for adjusting the horizontal position of the active screen.



9 V. CENT switch

 Switch for adjusting the vertical position of the active screen.

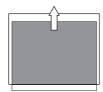


10 ROTATION switch

- Switch for correcting deviation of PURITY due to geomagnetic effects when the monitor orientation is changed. Set the screen to one color using the SCREEN switch and adjust so that the entire screen becomes one even color.
- In the application where the monitor is rotated constantly such as on OB van, set the EL bit connector (EL561) on the DEF board to OFF to deactivate the ROTATION circuit.

This connector is set to ON as factory setting.

(1) WIDTH switch

 Switch for adjusting the width of the active screen by scan size and aspect.

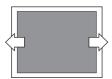


(12) **HEIGHT** switch

 Switch for adjusting the height of the active screen by scan size and aspect.



13 **H. PHASE** switch

- Switch for adjusting the horizontal phase of the marker.
- Display the 100% marker and adjust so that the image fits inside the 100% frame.

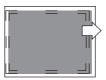


(4) **APT PRESET** switch

- Switch for adjusting the aperture.
- This switch will not function unless the APT switch on the front panel is set to ON (LED is ON).

(15) **EXPAND** switch

- Switch for adjusting the SEIDE PIN, TRAPEZOID and MOIRE.
- Each time the switch is pressed, TRAPEZOID, SIDE PIN and MOIRE alternates.

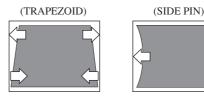

16 R. BACKGROUND switch

- Switch for adjusting the low light balance (red component).
- For details of the adjustment, refer to 4-6 (3).

① G. BACKGROUND switch

- Switch for adjusting the low light balance (green component).
- For details of the adjustment, refer to 4-6 (3).

18 R. BACKGROUND switch

- Switch for adjusting the low light balance (blue component).
- For details of the adjustment, refer to 4-6 (3).

(19) G. GAIN switch

- Switch for adjusting the high light white balance (green component).
- For details of the adjustment, refer to 4-6 (3).

B. GAIN switch

- Switch for adjusting the high light white balance (green component).
- For details of the adjustment, refer to 4-6 (3).

(21) **HUE PRESET** switch

- Switch for adjusting the HUE PRESET data.
- This circuit operates only when the NTSC decoder module **DE-811** is mounted and the analog/digital (D2) NTSC composite signal input is selected.
- For details of the adjustment, refer to 4.6 (4).

(2) CHROMA PRESET switch

- Switch for adjusting the CHROMA PRESET data.
- For details of the adjustment, refer to 4.6 (4).

BRIGHTNESS PRESET switch

- Switch for adjusting the BRIGHTNESS PRESET data.
- This circuit does not operate in the DELAY state.
- For details of the adjustment, refer to 4.6 (1).

(24) **CONTRAST PRESET** switch

- Switch for adjusting the CONTRAST PRESET data.
- For details of the adjustment, refer to 4.6 (2).

(3) STORE FILE switch

- Switch for copying the currently displayed color temperature data to FILE 1 to FILE 3.
- FILE 1 to FILE 3 blink when the switch is pressed.
 Press the desired destination FILE switch. The FILE LED lights up and the data is copied to the FILE.
- The PRESET data to be stored includes the following nine data shown in the white frames on the panel.

HUE, CHROMA, BRIGHT, CONT, R.BKG, G.BKG, B.BKG, G.GAIN, B.GAIN

② FILE 1 switch

 Set this switch to ON to output or store data in FILE 1.

(27) FILE 2 switch

 Set this switch to ON to output or store data in FILE 2.

® FILE 3 switch

• Set this switch to ON to output or store data in FILE 3.

(9) **MENU** switch

• Switch to call various menus.

(30) **ENT** switch

• Switch to execute MENU operations.

(31) **ESC** switch

Switch to exit MENU.

③ U. DISPLAY switch

• Not available in this version.

(3) **ASP-80** input connector

 Input connector for the optional auto setup probe ASP-80 (option).


(34) ROTARY ENCORDER

 Used for changing the PRESET data in the drawer panel and selecting items in the MENU mode.

4-4. Storing and Changing Data in the Memory

(1) Storing and changing the PRESET data

<Ex: 1> Changing the H.PHASE, H.CENT, V.CENT, WIDTH, HEIGHT, TRAPEZOID and SIDE PIN.

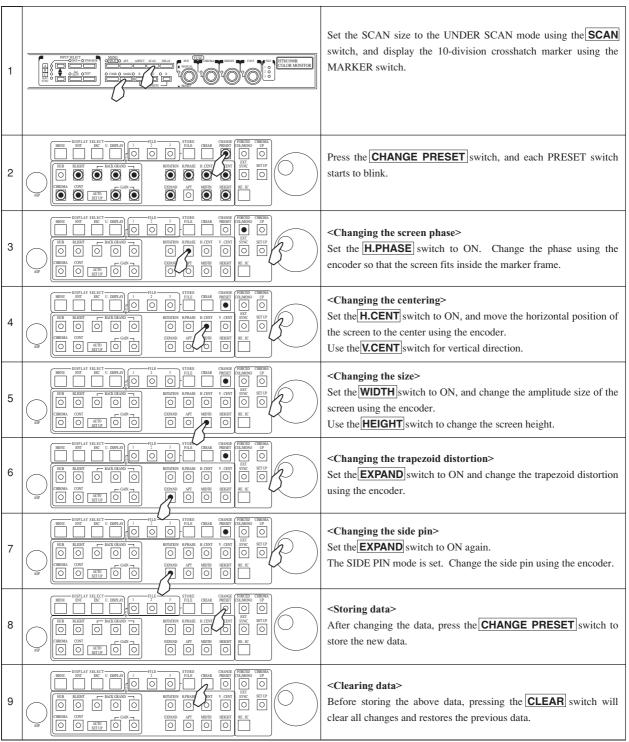


Note

The H.PHASE, H.CENT, V.CENT, WIDTH, HEIGHT, TRAPEZOID and SIDE PIN data are stored as separate data items for each signal format, scan size or aspect ratio. If the following switches are operated during data change, the changed data will be cleared. Store the data before changing the channel, scan size, aspect ratio or input signal format.

■ INPUT SELECT switch **■ SCAN** switch **■ ASPECT** switch

<Ex: 2> Changing APT

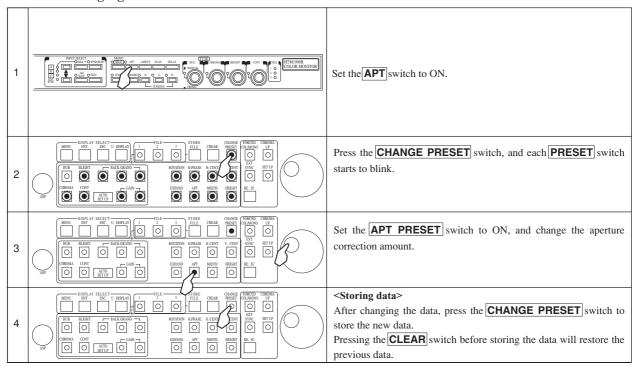


(2) Changing and storing the FILE DATA

<Ex: 1> Copying the REFERENCE (FILE OFF state) data to FILE 3 and changing the color temperature.

1	THE STORE	<pre><storing file=""> Press the STORE FILE switch. FILE 1 to FILE 3 switches blink.</storing></pre>
2	THE STORE	Press the FILE 3 switch. The current FILE DATA is copied to the FILE 3.
3	MANU DIST SELECT LUBRIAN	Press the CHANGE PRESET switch. Each PRESET switch starts to blink.
4	MANU DIST SELECT USBELAN	Set the R.BACKGROUND switch to ON and change the data using the encoder. Then press the other PRESET switch to change the color temperature.
5	MSU	Storing data> After changing the data, press the CHANGE PRESET switch to store the new data.
6	MSN	<clearing data=""> Before storing the above data, pressing the CLEAR switch will clear all changes and restore the previous data.</clearing>

4-5. Types of Markers

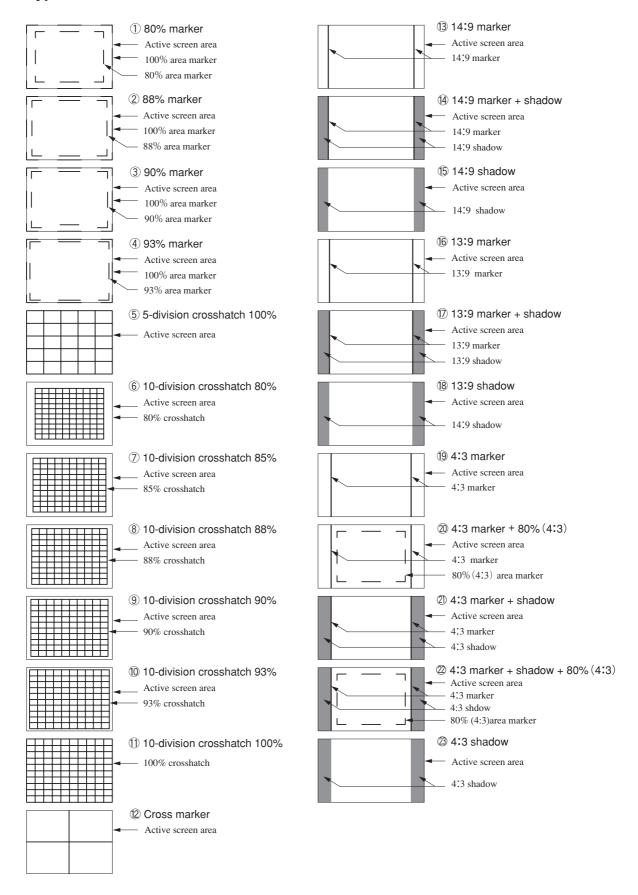

4-6. Adjustment Procedure

 The following adjustments will be more precise if you dim the monitoring environment.

(1) Adjusting the brightness

a) Brightness

Brightness adjustment is to set the appropriate black level.

It must be adjusted according to the brightness of the environment in which the monitor is used so that the black level is not too high or too low.

b) Adjustment procedure

1 Input signal

Select the gray scale with pluge using the internal TEST signal.

2 Adjusting BRIGHTNESS

While taking note of the pluge portion at the center of the signal, decrease BRIGHTNESS gradually until the brightness of Part A (-2%) and Part B (0%) in the figure cannot be visually differentiated. Also make sure that Part C (+2%) is illuminated slightly. If this cannot be confirmed, raise BRIGHTNESS until Part C gets a little bright.

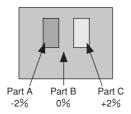


Fig. 4-6-1. Pluge Portion

(2) Adjusting the contrast

a) Contrast

Contrast of the monitor is factory-adjusted to the level optimum for monitoring images.

b) Precautions

Leaving the monitor in the bright state (where the OVER LOAD LED is lit) for a long period of time will shorten the life of the CRT. Therefore adjust the PRESET data to the value shown below.

c) Adjustment procedure

1 Input signal

Input a window signal (100%) or select the internal TEST signal (window signal).

②Measure the luminance value of the window using a luminance meter, and adjust the contrast to 120nit(cd/m²) or 35fL.

(3) Adjusting the white balance

a) White balance

The monitor has four files to store white balance data. The four files are set to the following color temperatures as default.

REFERENCE : 6500k
 FILE 1 : 6500k
 FILE 2 : 9300k
 FILE 3 : 6500k

- * The white balance can be adjusted using an analyzer or the optional **ASP-80** (option) for automatic adjustment.
- * Use the FILE 3 when you want to store customadjusted color temperature data.

b) Precautions

To stabilize the black level over a long period of time, this monitor adopts the beam feedback clamp method which detects beam currents to perform clamping. Therefore one line (Part A in Fig. 4-6-2) is displayed on the CRT.

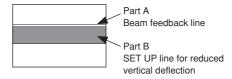


Fig. 4-6-2. SETUP ON State

If the BACKGROUND is lowered so that Part B in Fig. 4-6-2 becomes invisible, the line at Part A disappears, disabling the detection of the beam current.

Pay careful attention when adjusting BACKGROUND.

c) Adjustment procedure 1 (Adjusting visually)

1 Input signal

Input a color bar signal or select the internal TEST signal (gray scale with pluge).

2 Setting the file

Select the file whose white balance you want to change.

Adjust BRIGHTNESS and CONTRAST properly before adjusting the white balance.

3 Settings before adjusting BACKGROUND

Set the **MONO** switch on the front panel to ON for color bar signals and set the black/white screen. Set the **SET UP** switch in the drawer panel to ON and set as follows.

4 Initial adjustment of low light

- Set only the R.SCREEN switch to ON (red screen only), adjust the R.BACKGROUND data so that the red line at Part B in the figure 4-6-2 illuminates slightly.
- Set only the G.SCREEN switch to ON (green screen only), adjust the G.BACKGROUND data so that the red line at Part B in the figure 4-6-2 illuminates slightly.
- Set only the B.SCREEN switch to ON (blue screen only), adjust the B.BACKGROUND data so that the red line at Part B in the figure 4-6-2 illuminates slightly.

5 Adjusting the high light portion

- Return the **SET UP** and **SCREEN** switches to OFF.
- Pay attention to the high light portion of the staircase wave, and adjust the G/B GAIN to the desired color temperature.

6 Adjusting the low light portion

- Pay attention to the low light portion of the staircase wave, and adjust the R/G/B BACKGROUND to the desired color temperature.
- The S and 6 adjustments interfere with each other, repeat them until the desired color temperature is acquired from low light to high light.

d) Adjustment procedure 2 (Using the color analyzer)

To adjust the color temperature of the monitor using a commercially available color analyzer, adjust the G/B GAIN and R/G/B BACKGROUND of the monitor so that the chromaticity points (x, y) measured with the color analyzer becomes the following values.

CIE Chromaticity Points (x, y) in Relation to Color Temperature

Color Temperature	х	у
6500k	0.313	0.329
9300k	0.283	0.297

1 Input signal

Input a window signal or select the internal TEST signal (window signal).

2 Setting the file

Select the file whose white balance you want to change.

Adjust BRIGHTNESS and CONTRAST before adjusting the white balance.

3 Adjusting R.BACKGROUND

To adjust the white balance based on red, set the R.BACKGROUND as follows.

• Set the **SET UP** switch in the drawer panel to ON, and set as shown in Fig. 4-6-2.

- Set only the R.SCREEN switch to ON (red screen only), and adjust the R.BACKGROUND data so that the red line at Part B in the figure illuminates slightly.
- Return the **SET UP** and **SCREEN** switches to their original settings (OFF), and do not move R.BACKGROUND thereafter.

4 Setting CONTRAST

Set CONTRAST to MANUAL, and contact the probe at the center of the window signal displayed on the screen. Preset the luminance value to approx. $5 \text{nit} (cd/m^2)$ or 1.5 fL using MANUAL operation.

The MANUAL luminance value set here changes as the white balance is adjusted. Therefore check the luminance every time you adjust the low light portion, and readjust the luminance if deviated.

A deviation of approx. ±2nit (±0.5fL) is allowed.

Setting the chromaticity points (x, y) during high light

Set CONTRAST to PRESET, and set the chromaticity points (x, y) in the high light portion as follows using G/B GAIN.

- First adjust B.GAIN so that the chromaticity point x becomes the specified value.
- Next adjust G.GAIN so that the chromaticity point y becomes the specified value.
- Repeat adjusting the chromaticity points (x, y) until
 they settle to the specified values. Adjusting the
 low light portion later will cause the chromaticity
 point during high light to deviate. Therefore go on
 to adjust the low light portion when the specified
 value is approached in the initial adjustment stage.

⑤ Setting the chromaticity points (x, y) during low light

Set CONTRAST to MANUAL, and set the chromaticity points (x, y) in the low light portion as follows using G/B GAIN.

- First adjust the chromaticity point x to the specified value using B.BACKGROUND.
- Next adjust the chromaticity point y to the specified value using G.BACKGROUND.
- Repeat adjusting the chromaticity points (x, y) until they settle to the specified values. Adjusting the low light portion will cause the chromaticity point during high light to deviate. Therefore adjust the high light portion again when the specified value is approached in the initial adjustment stage.
- The adjustments are complete when the chromaticity points of both low light and high light portions have settled at the specified values.

(4) Adjusting the color balance

a) Color balance

For the component signal (YPbPr/RGB), adjust the color balance using CHROMA only. If the NTSC decoder module **DE-811** is mounted, input NTSC composite signal, and adjust the color balance using HUE/CHROMA.

b) Adjustment procedure 1 (NTSC composite signal)

1 Input signal

Input SMPTE color bar signal or the NTSC 75% color bar signal similar to it.

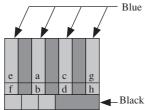


Fig. 4-6-3. NTSC 75% Color Bar Signal

2 Starting

Set the screen to blue only using the **SCREEN** switch.

* As the luminance difference is hard to discern when the screen is bright, dim the surroundings as much as practical and lower the BRIGHTNESS manually until the blue signal is slightly visible. This will help make more accurate adjustment.

3 Adjusting HUE

Adjust HUE so that the parts a to d in Fig. 4-6-3 become the same brightness.

If they do no become the same brightness, set to the optimum state, and next adjust CHROMA.

4 Adjusting CHROMA

Adjust CHROMA so that the parts e to h in Fig. 4-6-3 become the same brightness.

If they do no become the same brightness, set to the optimum state, and adjust the HUE as described in step 3.

⑤Repeat adjustments ③ and ④ until a to h become the same brightness.

c) Adjustment procedure 2 (Component signal)

1 Input signal

Input the 100% color bar signal to the YPbPr input.

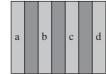


Fig. 4-6-4. 100% Color Bar Signal

2 Starting

Set the screen to blue only using the **SCREEN**

* As the luminance difference is hard to discern when the screen is bright, dim the surroundings as much as practical and lower the BRIGHTNESS manually until the blue signal is slightly visible. This will help make more accurate adjustment.

3 Adjusting CHROMA

Adjust CHROMA so that the parts a to d in Fig. 4-6-4 become the same brightness.

If the input signal is 75% color bar signal (a is 100% white and the parts b to d are 75%), adjust CHROMA so that the parts b to d become the same brightness.

(5) Adjusting the focus

a) Focus

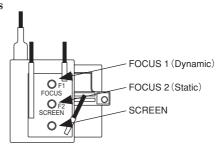


Fig. 4-6-5. Flyback transformer

b) Precautions

The flyback transformer provides the CRT with 26-kV high voltage. Only qualified service engineers may access this device. Enough care must also be paid not to touch any other parts than the controls.

c) Adjustment procedure

1) Starting

Turn off the power and detach the monitor's top cover. Turn on the power again and heat-run the transformer for about 20 minutes.

2 Input signal

Select a fine signal that gets characters displayed over the entire screen or a character signal among the built-in test signals.

3 Adjusting FOCUS

Adjust FOCUS 2 (static focus) in **Fig. 4-6-5** to optimize the focus at the screen center. Adjust FOCUS 1 (dynamic focus) to adjust the focus at the screen corners. The FOCUS 1 and 2 affect each other. Adjust these focus controls alternately until the optimum focus is achieved over the entire screen.

(6) Adjusting the rotation

a) Rotation

ROTATION is the control for correcting changes in the purity caused by geomagnetic effects on the CRT which occur when the monitor is rotated.

Perform this adjustment every time the monitor is relocated.

b) Adjustment procedure

1) Starting

Press the DEGAUSS switch to demagnetize the CRT.

2 Input signal

Select a 50% white signal, which makes the entire screen evenly white, or the 50% full-flat internal TEST signal.

3 Adjusting ROTATION

- Press the R.SCREEN switch to set the screen to red only.
- Adjust ROTATION to the optimum purity of the screen (evenly red).
- Check also about the purity of green and blue.

(7) Adjusting the screen centering

a) Screen center

Use the following three controls when centering the screen.

Different data can be set for the respective signal formats.

• H.PHASE

Adjust the marker position so that the image and 100% marker phase match.

* Different data is set for each format.

• H.CENT

Adjust the horizontal deflection in relation to the escutcheon frame (CRT frame) so that the marker comes to the center of the frame.

* Different data is set for each format. In the case of HDTV signal, different data is set also for 16:9 and HD 4:3 SCAN.

• V.CENT

Adjust the vertical deflection in relation to the escutcheon frame (CRT frame) so that the marker comes to the center of the frame.

* Different data is set for each format.

b) Precautions

As the H.PHASE and H/V.CENT settings are stored as the data for each signal format, do not perform the following operations during the setting.

Performing any of the switching below will call the data in a different format and clear the data you are now working on.

- Switching channels
- Changing input signal format
- Switching SCAN
- Switching ASPECT

c) Adjustment procedure

Perform the following adjustment once for each signal format.

1 Input signal


• Check the MENU 1 format is set properly to the signal format to be changed.

For details of the format setting, refer to 4.7(3) in this manual.

• The input signal should be the one, such as monoscope signal, which can display video on the whole active screen area.


② Adjusting H.CENT/V.CENT

- Set the size to NORMAL using the **SCAN** switch.
- Set the **MARKER** switch to ON, and display the 10-division crosshatch.
- Adjust the horizontal direction of the marker using H.CENT and vertical direction using V.CENT so that the top, bottom, left and right sides become the same.
- Before switching to UNDER SCAN using the SCAN switch in the adjustment below, press the
 CHANGE PRESET switch to store the data.

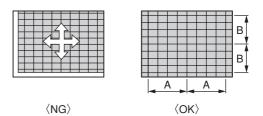

3 Adjusting H.PHASE

- Set to UNDER SCAN using the SCAN switch.
- Display the 100% marker using the **MARKER** switch.
- Adjust the phase using the H.PHASE so that the frame of the image matches the 100% marker.

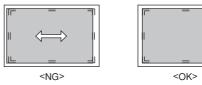

④ Before proceeding with the adjustments and changes in ② and ③ for a different format, first store the changed data and then switch the signal to a different format.

(8) Adjusting the screen distortion

a) Screen distortion

• The **SIDE PIN** and **TRAPEZOID** controls are provided to adjust the screen distortion.

Pressing the **EXPAND** switch executes these adjustments alternately.

These two preset data can be set differently for each signal format. In the case of HDTV signal, different data is set also for 16:9 and HD 4:3 SCAN.

b) Precautions

As the SIDE PIN and TRAPEZOID settings are stored as the data for each signal format, do not perform the following operations during the setting.

Performing any of the switching below will call the data in a different format and clear the data you are now working on.

- Switching channels
- Changing input signal format
- Switching SCAN
- Switching ASPECT

c) Adjustment procedure

1 Input signal


• Check the MENU 1 format is set properly to the signal format to be changed.


For details of the format setting, refer to 4.7(3) in this manual.

• Input a crosshatch signal or select the crosshatch internal TEST signal.

2 Adjusting TRAPEZOID

Set the EXPAND switch to ON. The TRAPEZOID adjustment mode is entered. Adjust the trapezoid as shown in the figure below.

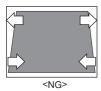

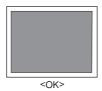

3 Adjusting SIDE PIN

Set the **EXPAND** switch to ON again. The SIDE PIN adjustment mode is entered. Correct the side pin distortion as shown in the figure below.





④ Before proceeding with the adjustments and changes in ② and ③ for a different format, first store the changed data and then switch the signal to a different format.

(9) Adjusting the screen size

a) Screen size

Set the screen size using HEIGHT and WIDTH. The following four sizes can be set for these two data per signal format (three sizes for HDTV). Individual data is provided for all formats which can be input, for the following sizes.

SCAN switch:

• NORMAL SCAN

UNDER SCAN

ASPECT switch: ● 4:3 SCAN

• 16:9 SCAN

b) Precautions

As the HEIGHT and WIDTH settings are stored as the data for each signal format, do not perform the following operations during the setting.

Performing any of the switching below will call the data in a different format and clear the data you are now working on.

- Switching channels
- Changing input signal format
- Switching SCAN
- Switching ASPECT

c) Adjustment procedure 1

(UNDER SCAN (HD 16:9, SD 4:3/16:9)

Adjust HEIGHT and WIDTH for HDTV 16:9 and SDTV 4:3/16:9 UNDER SCAN as follows.

1 Input signal

• Check the MENU 1 format is set properly to the signal format to be changed.

For details of the format setting, refer to 4.7(3) in this manual.


 The input signal should be one having a circle pattern, which can display video on the whole active screen area.

2 Adjusting HEIGHT and WIDTH

- Set the desired aspect using the **ASPECT** switch, and set UNDER SCAN using the **SCAN** switch.
- Set the MARKER switch to ON, and select the 100% marker.
- Adjust HEIGHT and WIDTH so that the 100% marker size becomes the UNDER SCAN size in the following table.

<UNDER SCAN Sizes>

	ASPECT	FORMAT	HEIGHT	WIDTH
ĺ	4:3	SD	270mm	360mm
ĺ	16:9	SD/HD	203mm	360mm

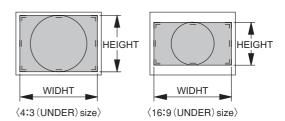

* Before proceeding to adjust another SCAN size, be sure to press the CHANGE PRESET switch now to store the current data.

d) Adjustment procedure 2

(NORMAL SCAN (HD 16:9, SD 4:3/16:9) Adjust HEIGHT and WIDTH for HDTV 16:9 and SDTV 4:3/16:9 NORMAL SCAN as follows.

1 Input signal

• Check the MENU 1 format is set properly to the signal format to be changed.

For details of the format setting, refer to 4.7(3) in this manual.

 Input a crosshatch signal or select the crosshatch internal TEST signal.


2 Adjusting HEIGHT and WIDTH

- Set the desired aspect using the ASPECT switch, and set NORMAL SCAN using the SCAN switch.
- Set the **MARKER** switch to ON, and select the 100%+93% marker.
- Adjust WIDTH so that the 93% marker size becomes the NORMAL SCAN size in the following table.
- Adjust HEIGHT so that the vertical diameter becomes identical to the horizontal diameter. If you are working with a signal not having a circle pattern, adjust the 93% marker size so that it becomes identical to the size shown below as a guide.

<NORMAL SCAN Sizes>

ASPECT	HD/SD	HEIGHT	WIDTH
4:3	SD	257mm	343mm
16:9	SD/HD	193mm	343mm

* This table shows the 93% marker size.

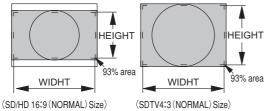

- * Before proceeding to adjust another SCAN size, be sure to press the CHANGE PRESET switch now to store the current data.
- e) **Adjustment procedure 3** (HDTV 4:3 SCAN) Adjust HDTV 4:3 SCAN as follows.

1 Input signal

 Check the MENU 1 format is set properly to the signal format to be changed.

For details of the format setting, refer to 4.7(3) in this manual.

• Input a crosshatch signal or select the crosshatch internal TEST signal.

② Adjusting HEIGHT and WIDTH


- Set the desired aspect using the **ASPECT** switch. The **SCAN** switch does not function.
- Set the **MARKER** switch to ON, and select the 4:3 marker.

• Adjust WIDTH so that the inner size of the 4:3 area marker becomes the size in the following table.

<HDTV 4:3 SCAN size guideline>

ASPECT	HD/SD	HEIGHT	WIDTH
4:3	HD	263mm	350mm

* This table shows the 4:3 marker size.

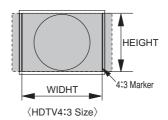

(10) Adjusting the moiré effect

a) Moiré effect

- Adjust the moiré effect that is caused by the correlation between the screen size and the CRT dot pitch. Press the EXPAND switch and the adjustment item will show up.
- The preset data varies from format to format. It is also different between 4:3 and 16:9 as well as between NORMAL and UNDERSCAN.

b) Precaution

The moiré effect is also saved in the data for each signal format. During the setting, therefore, do not d the following switchings. Otherwise a different data from the previously set one may be called and the data in progress will be cleared.

- Channel selection
- Input signal format switching
- Scan switching
- Aspect ratio switching


c) Procedure


1 Input signal

- Make sure the MENU 1 format is properly set for a desired signal format. The format settings are referred to in Item 4.7(3).
- Feed the 50% full white signal. Or select the 50% full white signal out of the built-in test signals.

2 Adjusting the moiré effect

1. Readjust the setting so that the streaking pattern should be minimized.

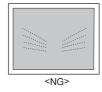

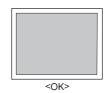

4-7. MENU Functions

(1) List of MENU


All functions can be executed in the MENU screen.


Table 4-1 List of MENU

MENU	MENU1	MULTI SDI FM Setting the format of SDI inputs	
	<format></format>	② RGB/YPbPr FM Setting the format of YPbPr/RGB inputs	
		③ →1035/1080I Setting the format of YPbPr/RGB input line	
		⊕ RGB/YPbPr Setting the format of YPbPr/RGB input signal	
		⑤ TEST SIG. FM Setting the format of internal TEST signals	
		Setting the channel format display ON/OFF	
		OCOLOR POINT Setting the color point	
	MENU2	① CENT. MARKER Setting ON/OFF of the center cross marker	
	<mode></mode>	② MARKER COLOR Setting the color of marker	
		3 SHADOW LEVEL Setting the shadow level	
		GHANGE ASPE. Setting AUTO/MANUAL aspect change	
		⑤ SET UP ······ Setting the set-up ON/OFF	
		® REMOTE NO Setting the remote ID number	
		DEGAUSS TM Setting the degauss ON timer	
	MENU3	SELECT FILE Selecting FILE	
	<pre>CHANGE DATA> CHANGE DATA> MENU4 < STATUS ></pre>	② STORE FILE Selecting the destination file	
		③ CHANGE FILE Setting AUTO/MANUAL file change	
		(4) LOAD FACTORY	
		① STATUS Displaying status information of each data	
		5.5p.aying datas mornation of saon data	
	MENU5	① PASSWORD LOCK Setting the data password lock	
	MENU6	TERO CALIBRATION Auto setup probe calibration	
	< SETUP(ASP-80)>	② AWB (6500k) 6500k auto white balance	
		3 AWB (9300k) 9300k auto white balance	
		AWB (USER DATA) User data auto white balance	
		S MEASUREMENT & MEMORY Color temperature/luminance measurement and	memo
		® REAL TIME MEASUREMENT Real-time color temperature/luminance measure	
	MENU7	DEAL TIME MEASUREMENT Treat-time color temperature/numinative measure DESCRIPTION TO THE TREATMENT OF THE TREATMENT	,,,,,oiit
	MENU7 ————————————————————————————————————	DED ENABLE	
	_	3 LED DIMMER Setting the brightness of audio level meter LED	

(2) Flow of MENU Operations


MENU can be switched as follows using the $\boxed{\text{MENU}}$ switch.

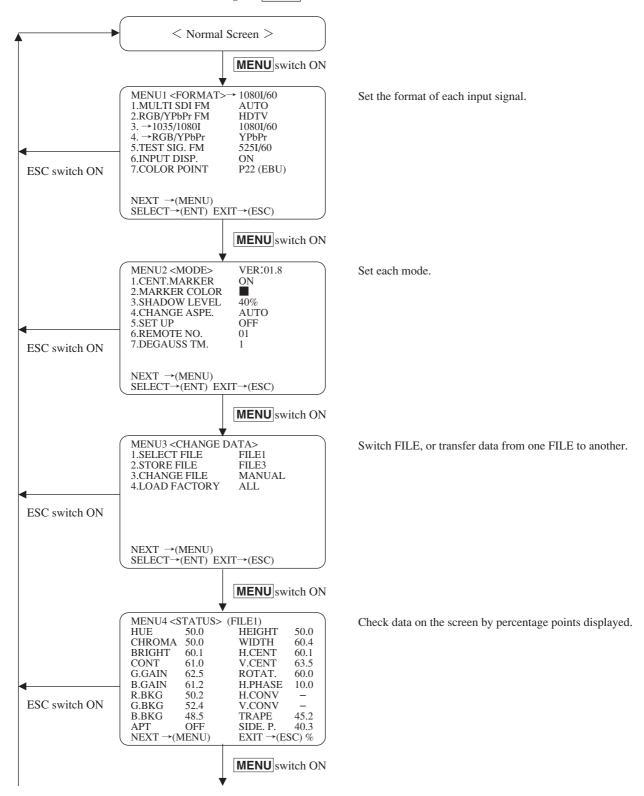

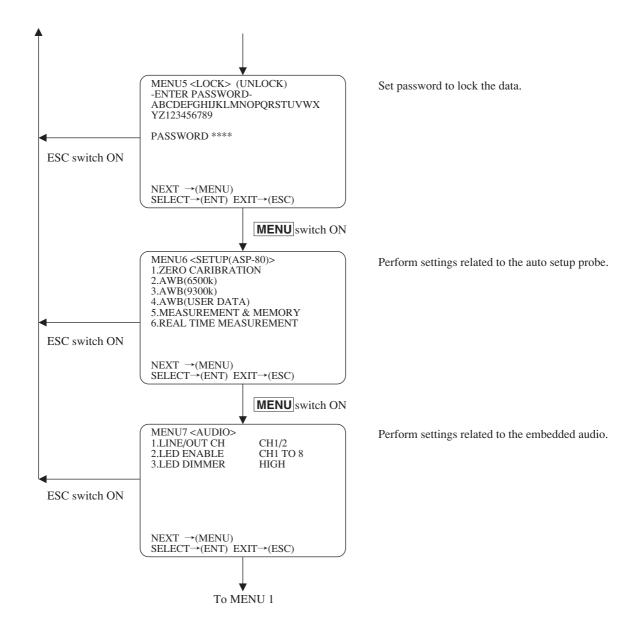

(3) Description of MENU 1 Functions

- * Note the following description on the menu.
- The vertical deflection frequency "/60" includes both 60 Hz and 59.94 Hz.
- The vertical deflection frequency "/48" shows 24 sF (23.98 sF).
- •480i/59.94 and 575i/50 are displayed as "525l/60" and "625l/50", respectively.

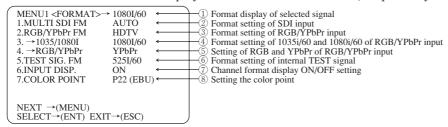

1 Format display of selected signal

• Shows the format of the currently selected signal.

2 Format setting of SDI input

• When the module (Ex: **DKH-501**) dedicated to HD-SDI input is mounted, set the format to any of 1035i/60, 1080i/60, 720p/60.

When the HD-SDI input is selected, the monitor will be set up using the format set here.

 The multi-format SDI module, if mounted, triggers [AUTO] display and the auto detection by FORMAT.
 The format setting described here is not necessary.

3 Format setting of RGB/YPbPr input

Set the RGB/YPbPr input format to SDTV or HDTV.

- If set to SDTV, the format 480i/59.94 or 575i/50 is automatically detected, and the monitor is set up.
- If set to HDTV, the format 1080i(1035i), 720p/60 is automatically detected, and the monitor is set up. If the input signal is 1035i/60 or 1080i/60, the format should be set individually in the following step.
- Default setting is HDTV.
- **(4)** Format setting of 1035i/60 and 1080i/60 of RGB/YPbPr input
- Set the scan line number to 1035i or 1080i.
- Default setting is 1080i/60.

5 Setting of RGB and YPbPr of RGB/YPbPr input

- Set the RGB/YPbPr input signal to RGB or YPbPr.
- Default setting is YPbPr.

6 Format setting of internal TEST signal

- Set the internal TEST signal of the monitor.
- The following five formats are provided as standard.

480i/59.94 ("525l/60" on the menu) 575i/50 ("625l/50" on the menu)

480p/59.94 (When supported by the monitor)

1035i/60

1080i/60

1080i/50


1080pi/24sF (When supported by the monitor)

720p/60

720p/50 (When supported by the monitor)

- Default setting is 1080i/60.
- 7 Channel format display ON/OFF setting
- Set whether to show the input and the signal format when the channel is switched.
- **8** Setting of color point
- Controls the video signal so that the color of P22 (EBU) phosphor of the monitor's CRT comes close to that of SMPTE phosphor.
- The video signal is re-matrixed. Make the P22 (EBU) setting for adjusting the color balance and other factors.
- Default setting is P22 (EBU).

(4) Description of MENU 2 Functions

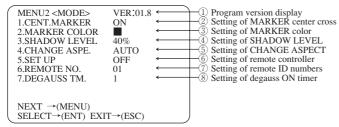


1) Program version display

• Displays the software program version.

2 Setting of MARKER center cross

• Set the marker center cross display to ON/OFF.

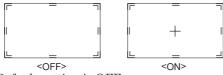

• Default setting is OFF.

3 Setting of MARKER color

- Set the marker color.
- Display colors: White, Red, Green, Blue, Yellow, Magenta, Cyan
- Default setting is Green.

4 Setting of SHADOW LEVEL

- The shadow's contrast level is preset at 0% or 40%.
- Default setting is 40%

5 Setting of CHANGE ASPECT

• Associate the change of aspect settings with the switching of inputs.

AUTO: Display with the aspect ratio preset for each channel.

MANUAL: Fixed aspect ratio without automatic change along with channel switching. Apply this setting if 4:3/16:9 switching is done using parallel remote connection.

6 Setting of remote controller

Make a setting for the remote controller to be used.
 RCT-20: Set to the option using RCT-20A/30A.
 RCT-17: Set to the option using RCT-17/27.

7) Setting of remote ID numbers

- Set the monitor ID numbers (01~99).
- When performing remote control operations using wireless remote controller (RCT-30A) or serial remote controller (SRC-301Z), the monitors can be remote controlled individually with the ID numbers (□01~99) assigned to the monitors.

8 Setting of degauss ON timer


- Set the operation start time of the degauss (demagnetization) function, which operates automatically when the power is turned on, using
 | 0 ~ | 9 | groups.
- By setting in groups ① to ②, the overall rush current which flows when the power of all devices of the system are turned On can be minimized.

• Timer operation

When set to 0, the degauss function will automatically start about 4 seconds after the power is turned on. The time delays with an increment of 0.5 seconds each time the setting is increased by 1. The table below shows the approximate time until the degauss function starts after the power is turned on.

Setting	Operation Start Time	Setting	Operation Start Time
0	4.0 seconds	5	6.5 seconds
1	4.5 seconds	6	7.0 seconds
2	5.0 seconds	7	7.5 seconds
3	5.5 seconds	8	8.0 seconds
4	6.0 seconds	9	8.5 seconds

(5) Description of MENU 3 Functions

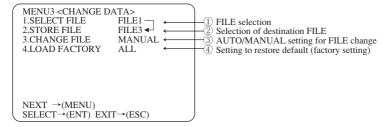


1) FILE selection

- Select any of REFERENCE, FILE 1, FILE 2 and FILE 3.
- The four files store the following 9 types of data.
 HUE, CONTRAST, R.BACKGROUND, CHROMA,
 G.GAIN, G.BACKGROUND, BRIGHTNESS, B.GAIN,
 B.BACKGROUND
- The operation is the same as the FILE switch in the drawer panel.

2 Selection of destination FILE

• The data (9 types) in the file selected in ① are all transferred (overwritten) to the file selected here.

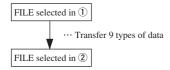

• When ALL is selected, the data in the file selected is transferred to all files (REF, FILE 1~3).

3 AUTO/MANUAL setting for FILE change

• Set AUTO or MANUAL for switching the FILE settings.

AUTO: FILE setting for each channel is

changed automatically along with

channel switching.

MANUAL: FILE setting is fixed.

4 Setting to restore default (factory setting)

• Perform this setting to restore the default settings.

ALL: Factory settings are restored for all PRESET data, all MENUs and switches.


PRESET: Factory settings are restored for all

PRESET data.

MENU&SW: Factory settings are restored for all

MENUs and switches.

(6) Description of MENU 4 Functions

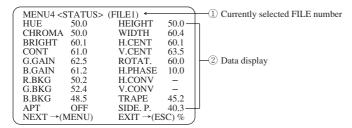

1 Currently selected FILE number


• Displays the currently selected FILE number.

2 Data display

• Various preset data are displayed in the range of 0 to 100% (0.1% resolution).

Note that H.PHASE is variable in the range of $0\sim25.0\%$.

(7) Description of MENU 5 Functions

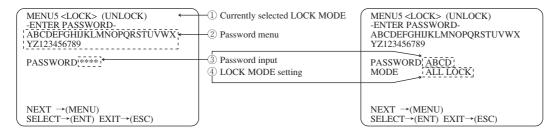

① Currently selected LOCK MODE

The currently selected LOCK MODE is displayed here

 UNLOCK: All data can be changed with the LOCK released.

• ALL LOCK:

Change of all PRESET data and switching of FILE are disabled.

• PRESET & FILE LOCK:

PRESET and FILE data are locked. Switching of FILE is allowed.

2 Password menu

• Using the rotary encoder, select the characters here to set the password.

3 Password input


• When setting the LOCK mode to ALL LOCK or PRESET & FILELOCK, or when exiting the LOCK mode (UNLOCK), select the characters from the menu in Section (2) and enter a 4-digit password here. If you forget your password, contact the nearest Ikegami dealer or Techno Ikegami. We will provide a password to exit the LOCK mode.

4 LOCK MODE setting

When the **ENT** switch is pressed after entering the password, the LOCK mode blinks and can be changed by the rotary encoder. After this, fix the settings using the **ENT** switch and return to the previous state using the **ESC** switch.

(8) Description of MENU 6 Functions

For operation details, refer to the ASP-80 manual.

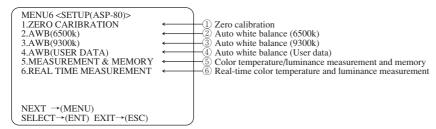

1 Zero calibration

- Perform the calibration of ASP-80.
 Connect ASP-80 to the monitor, and make sure to perform this calibration before proceeding onwards.
- The function is disabled unless ASP-80 is connected.
- Be careful not to allow external light into the sensor.
- When the sensor is not receiving light to be measured, the message "ERROR 1: TOO LIGHT" appears.

2 Auto white balance (6500k)

- Setup at 6500k.
- To execute this setup, an input of 100% window signal or the window pattern internal test signal is needed.

3 Auto white balance (9300k)

- Setup at 9300k.
- To execute this setup, an input of 100% window signal or the window pattern internal test signal is needed.

(4) Auto white balance (User data)

- Setup at user color temperature.
- To execute this setup, an input of 100% window signal or the window pattern internal test signal is needed.

⑤ Color temperature and luminance measurement and memory

- Measure the color temperature, luminance and raster luminance of the user setting.
- The results can be stored as USER DATA if necessary.
- Measurable ranges are as follows.

Luminance : $10\sim190\text{cd/m}^2$ Raster luminance : $0.01\sim0.99\text{cd/m}^2$ Color temperature $0.250\sim0.380$ (x, y coordinates) :


® Real-time color temperature and luminance measurement

- Color temperature and luminance are measured for real-time display of the readings.
- The function can also be applied to the measurement of other devices.

(9) Description of MENU 7 Functions

* This menu is intended to control the embedded audio module **DKM-5**AV,AVD** and the embedded audio level meter module **DAM-504,508**.

The setting in this menu does not function for a monitor without the above modules.

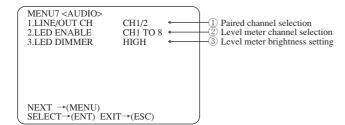

1) Paired channel selection

- Select the DKM-5**AV analog audio line output (2ch) from the four pairs of channels CH1/2, CH3/4, CH5/6 and CH7/8.
- This function is disabled for the embedded digital audio output model (DKM-5**AVD).

2 Level meter channel selection

- Select the display channel of DAM-504/508 from 8channel (CH1 TO 8), 6-channel (CH1 TO 6) and 2channel (CH1 TO 2) as necessary.
- For **DAM-504** (4-channel model), the selections of 8-channel and 6-channel are disabled.

3 Level meter brightness setting

• Select the brightness of **DAM-504/508** level meter LED from HIGH, MID, LOW and OFF.

4-8 Messages Displayed on the Screen

Message	Explanation
ALL LOCK	Cause: This message is displayed during the LOCK mode (see 4.7(7)) or when FILE 1, FILE 2 or FILE 3 switch is pressed. Action: Release the LOCK mode (UNLOCK), and resume the operation.
PRESET&FILE LOCK	Cause: This message is displayed when CHANGE PRESET switch or STORE FILE switch is pressed during the PRESET FILE setting in the LOCK mode (see 4.7(7)). Action: Release the LOCK mode (UNLOCK), and resume the operation.
CHANGE PRESET → ON	Cause: This message is displayed when each PRESET switch is pressed while CHANGE PRESET switch is OFF. Action: Set CHANGE PRESET switch to ON, and resume the operation.
CHANGE PRESET → OFF	Cause: This message is displayed when each PRESET switch is pressed while CHANGE PRESET switch is ON. Action: Set CHANGE PRESET switch to OFF, and resume the operation.
DELAY → OFF	Cause: This message is displayed when BRIGHT PRESET switch is pressed in the DELAY mode. Action: Cancel the DELAY mode, and resume the operation.
APT → ON	Cause: This message is displayed when APT PRESET switch is pressed while APT switch is OFF. Action: Set APT switch to ON, and resume the operation.
STORE FILE → OFF	Cause: This message is displayed when CHANGE PRESET switch is pressed while FILE 1 to FILE 2 are blinking by pressing STORE FILE switch. Press STORE FILE switch to cancel the selection prompt (blinking), and resume the operation.
MANUAL → OFF	Cause: This message is displayed when PRESET switch is pressed while any MANUAL control is set to the MANUAL mode. Action: Set to the PRESET mode, and resume the operation.
MENU → OFF	Cause: This message is displayed when CHANGE PRESET switch is pressed with MENU on. Action: PRESET data cannot be changed with MENU on. Exit the MENU, and resume the operation.
NO OPERATION	Cause: This message is displayed when the operation is wrong or invalid. Action: Check the operation procedure and try again.
ENTER CORRECT PASSWORD	Cause: This message is displayed when wrong password is entered while setting the LOCK mode in the MENU 5. Action: Check the password and enter correctly.
	Cause: This mark is displayed when the MPU BOARD data backup lithium battery is low. Action: Replace the battery immediately. Refer to the service manual for the replacement method.

5. Installation of Options

5-1 Option Module

<Notes>

- ① Modules should be inserted into the slots specified in the figure below.
- 2 Optional modules should be inserted into the slot Nos. 2-5. (The figure below is an example. These modules may not be installed in the product you purchased.)

- ③ Slot 1 and Slot 6 accept the fixed modules only.
- 4 Remove the blank panel before you mount the module.
- (5) Fix the module securely with the two screws located at top and bottom.
- 6 Loose screws may cause the module to come off or result in poor connector contact.

MODEL NO.		SLOT WIDTH	
DK-801A	4:2:2 Digital Com	1	
DK-8012	4:2:2/4 Fsc NTS0		1
DKM-511A/B	Multi-Format Digi	1	
DKM-511*AV		ded Audio Analog Output	2
DKM-511*AVD		ded Audio AES/EBU Output	2
DKM-511*AV DKM-511*AVD 1 2 3 REMOTE SERVAL OO	Ditto with Embed Ditto with Embed MODEL NO. DE-811 A 5 6 WISC CHA CHA CHA CHA CHA CHA CHA CHA	MODULE NAME NTSC 3/PAL-B Line Comb Decoder Module MPU Module This module is fixed to Slot 1, and cannot be i VIDEO PROCESS Module This module is fixed to Slot 6, and cannot be i	SLOT WIDTH 1 Inserted to other slot.
©			


5-2 Rack Mount Adapter

1. **RS-2020S**

Rack Mount Adapter for HTM-1907R/2005R/2050R/1980R/1990R/2070R


*The parts marked are supplied with the slide rail.

*Marks are attachments for the side rail.

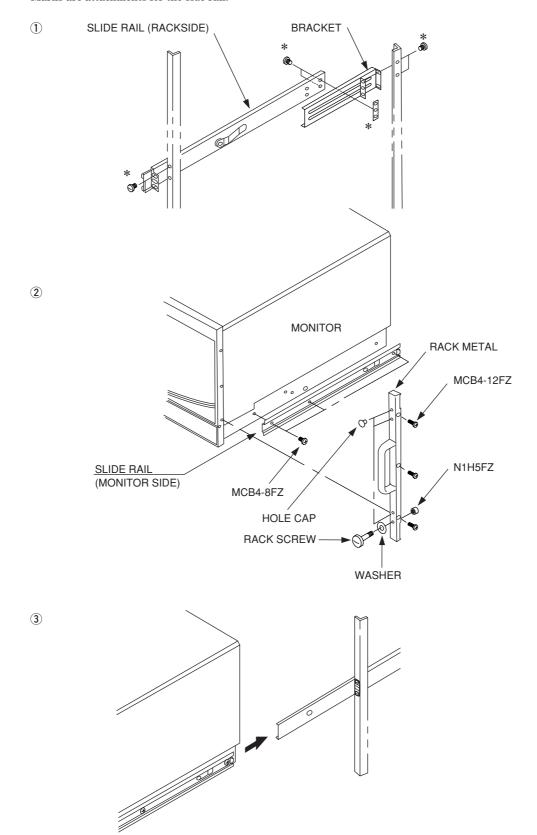


5-3 Remote Controller

(1) RCT-30A Infrared Remote Controller

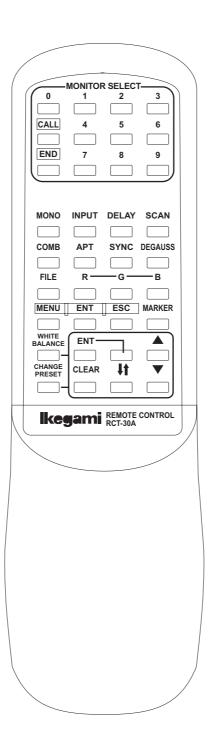

(2) SRC-301Z Serial Remote Controller

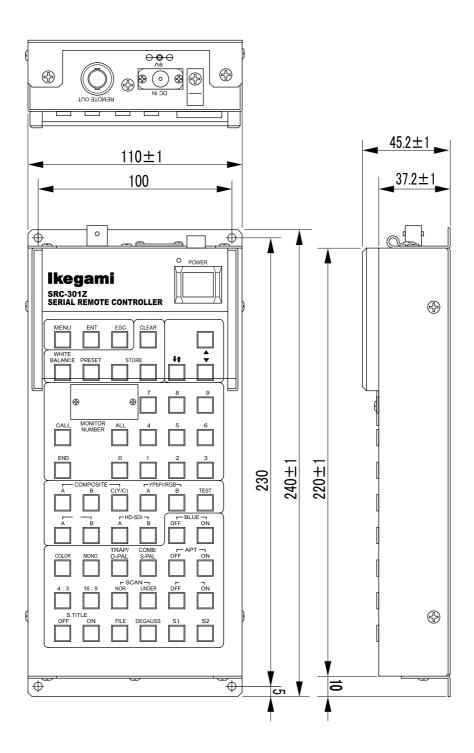

6. Memo

Although various PRESET DATA has data of the following kinds, write down customized PRESET DATA for your memorandum.

If you have modified the PRESET DATA unintentionally, you can restore the default setting by executing LOAD FACTORY in MENU 3-4.

DATA	REF.	FILE 1	FILE 2	FILE 3
HUE				
CHROMA				
BRIGHT				
CONT				
G.GAIN				
B.GAIN				
R.BKG				
G.BKG				
B.BKG				
APT				
ROTATION				

	DATA	480i	575i	1035i	1080i	720p	()	()
	4:3 UNDER							
	4:3 NORMAL							
HEIGHT	HD 4:3*							
	16:9 UNDER							
	16:9 NORMAL							
	4:3 UNDER							
	4:3 NORMAL							
WIDTH	HD 4:3*							
	16:9 UNDER							
	16:9 NORMAL							
H.CENT	HD 4:3 *							
	16:9							
V.CENT								
H.PHASE	HD 4:3 *							
	16:9							
TRAPEZO	OID HD 4:3 *							
	16:9							
SIDE PIN	HD 4:3 *							
	16:9							
MOIRE	4:3 UNDER							
	4:3 NORMAL		_					
	HD 4:3							
	16:9 UNDER							
	16:9 NORMAL							

^{*} 4:3 means HD4:3SCAN in the case of HDTV.

MODEL HTM-1990R MULTI-FORMAT COLOR MONITOR

OPERATION MANUAL

Published by Ikegami Tsushinki Co., Ltd.

© Apr. 2007 by Utsunomiya Factory
of Ikegami Tsushinki Co., Ltd.

- All right reserved. Reproduction or duplication, without permission of Ikegami Tsushinki Co., Ltd. of edition or contents in whole in part, any manner, is prohibited.
- $\hfill \blacksquare$ Specifications and design are subject to change without notice.

OMH1990R-U/E-1

Edited by Koyo 21 Co., Ltd. 07 Apr.

Ikegami

Ikegami Tsushinki Co., Ltd.

5-6-16, Ikegami, Ohta-ku, Tokyo, Japan 146-8567 Phone:(03)5700-1111 Fax:(03)5700-1137

Ikegami Electronics (U.S.A.), Inc.

37 Brook Avenue, Maywood, New Jersey 07607 Phone:(201)368-9171, Fax:(201)569-1626

Ikegami Electronics (Europe) GmbH

Ikegami strasse 1, 41460 Neuss 1, F. R. Germany Phone:(02131)123-0, Fax:(02131)102820

Property of	
	PRINTED IN JAPAN